


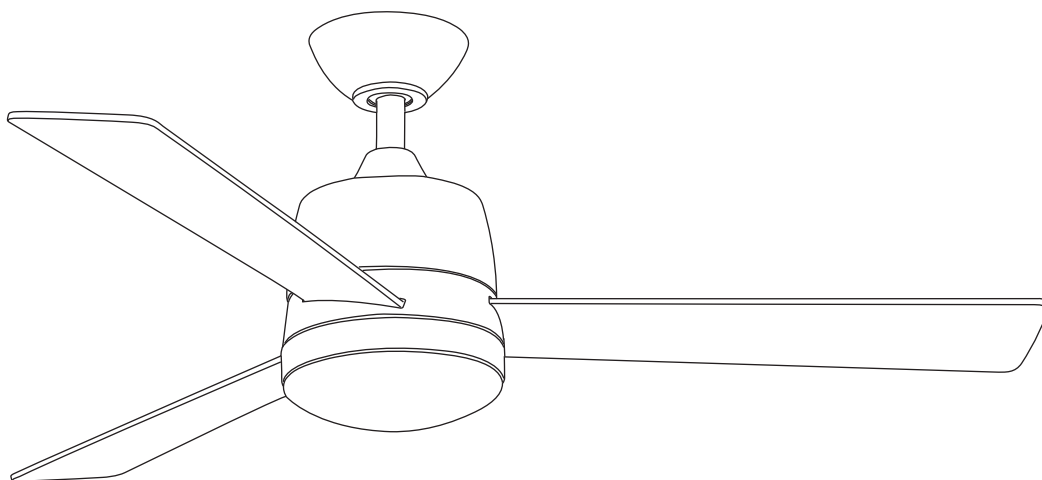

INSTALLATION INSTRUCTIONS

CITIE



QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (ENGLISH)

1-800-567-2513 (FRENCH)

Monday through Friday 8:00 a.m. to 5:00 p.m. EST

IMPORTANT FOR YOUR RECORDS, RECORD AND KEEP THE FOLLOWING INFORMATION

Date of purchase: _____

Place of purchase: _____

Model on carton: _____

I.D.# (bottom of carton): _____

UPC (bottom of carton): _____

NOTE: FOR OPTIMUM QUIETNESS, FULLY ASSEMBLE FAN AND RUN FOR 24 HOURS

SAFETY PRECAUTIONS

1. Turn off power at main electrical service box before starting installation.
2. Electrical connections must comply with local code ordinances or national electrical codes.
3. Make sure the installation site you choose allows the fan blades to rotate freely without any obstructions.
4. When mounting the fan on a ceiling outlet box, use a metal octagon box. The outlet box and its support must be able to withstand the moving weight of the fan (minimum of 35 lbs.).

TOOLS AND MATERIALS REQUIRED


Adjustable wrench
Phillips screwdriver
Blade screw driver
Step ladder
Wire cutters
Wiring supplies as required

WARNING

- to reduce the risk of personal injury **DO NOT** bend the blade brackets when installing the brackets, balancing the blades or cleaning the fan. Also, **DO NOT** insert foreign **objects** in between rotating fan blades.
- mount only to an outlet box marked acceptable for fan support
- mount with the lowest moving parts at least 2.1 meters (6.9 feet) above floor grade level.
- **DO NOT** operate reversing switch while fan blades are in motion. Fan must be turned off and rotating blades stopped, reverse chain pull, the speed chain pulled again to start in the opposite direction.

ASSEMBLY DRAWING

1. wooden joist
2. metal outlet box (not **provided**)
3. ceiling
4. mounting bracket
5. outlet box screws
6. wood screws & flat washers
7. downrod
8. canopy
9. canopy cover
10. yoke cover
11. bolt
12. cotter pin
13. motor
14. blade screw
15. fiber washer
16. blade
17. light kit plate
18. light kit
19. 75W E11 bulb
20. glass shade
21. receiver
22. remote control

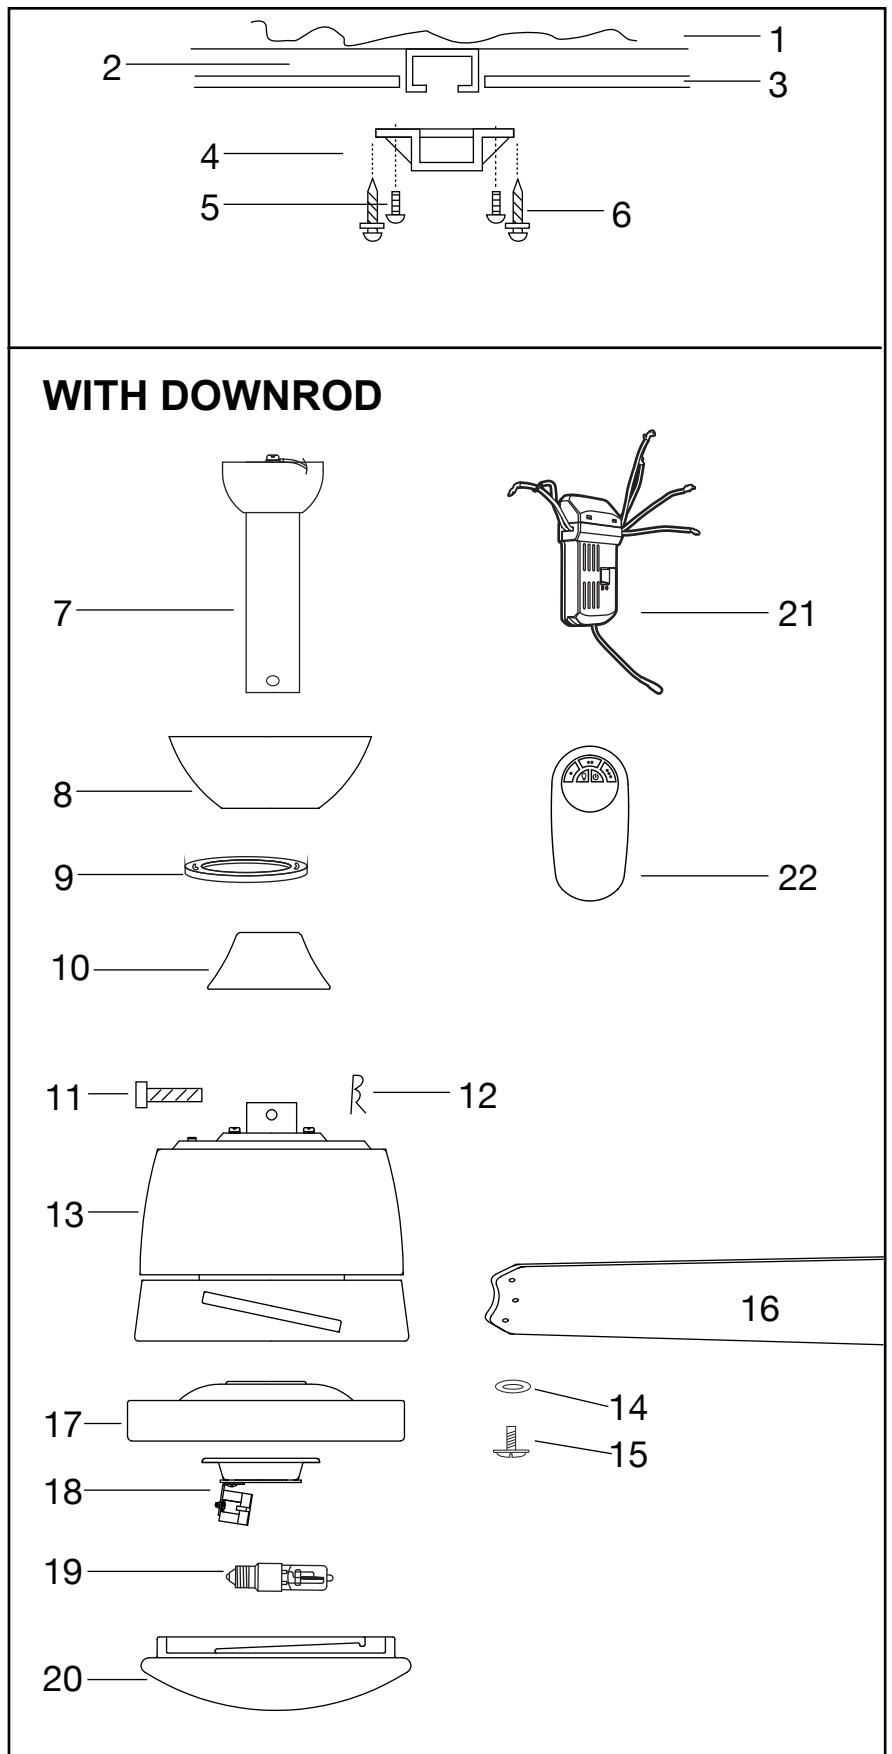






INSTALLATION

1. MOUNTING

***NOTE: all set screws must be checked and re-tightened where necessary after installation.**

DOWNROD MOUNT


- obtain fan motor
- remove cotter pin and bolt from yoke
- loosen jam screw in yoke until it is flush with the inside surface
- obtain dowrod, canopy, canopy cover and yoke cover
- place dowrod inside canopy, canopy cover and yoke cover
- route wires and safety cable exiting motor through canopy and dowrod
- insert bolt through hole in shaft and dowrod
 - *be careful not to damage or cut the fan wires
- secure bolt with cotter pin
- secure dowrod in position by tightening jam screws and lock nut
- place glass motor housing onto motor top
- slide yoke cover (optional) over yoke

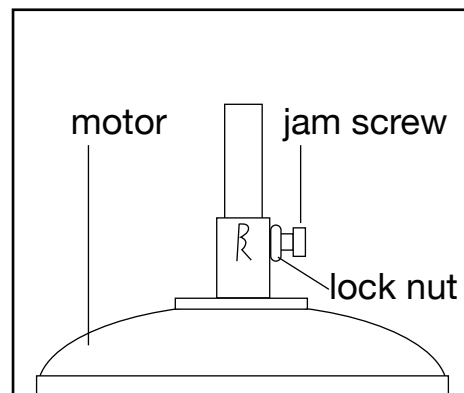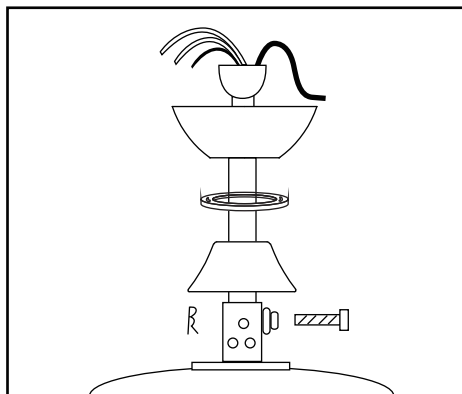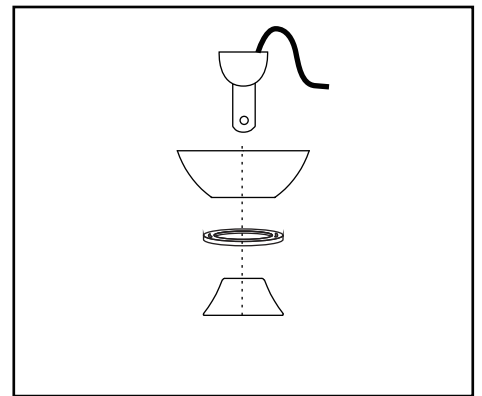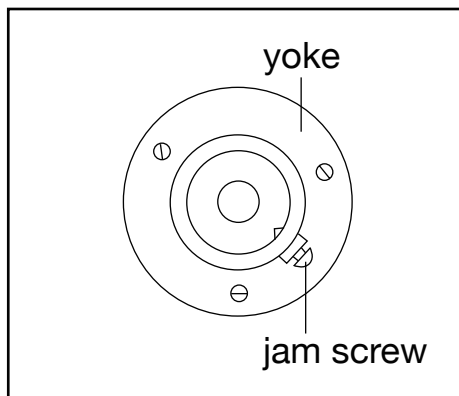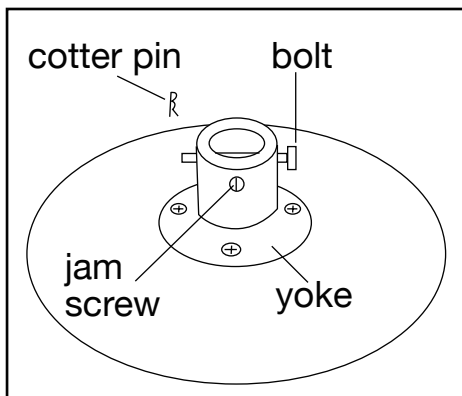

INSTALLATION

2. INSTALL MOUNTING BRACKET




- secure rubber gasket and mounting bracket to metal outlet box using outlet box screws
- secure once more by placing two wood screws and flat washers (supplied) through outer slots of mounting bracket and into the wood joist. Leave one of the wood screws sufficiently loose to allow the safety cable to be looped around before final tightening.

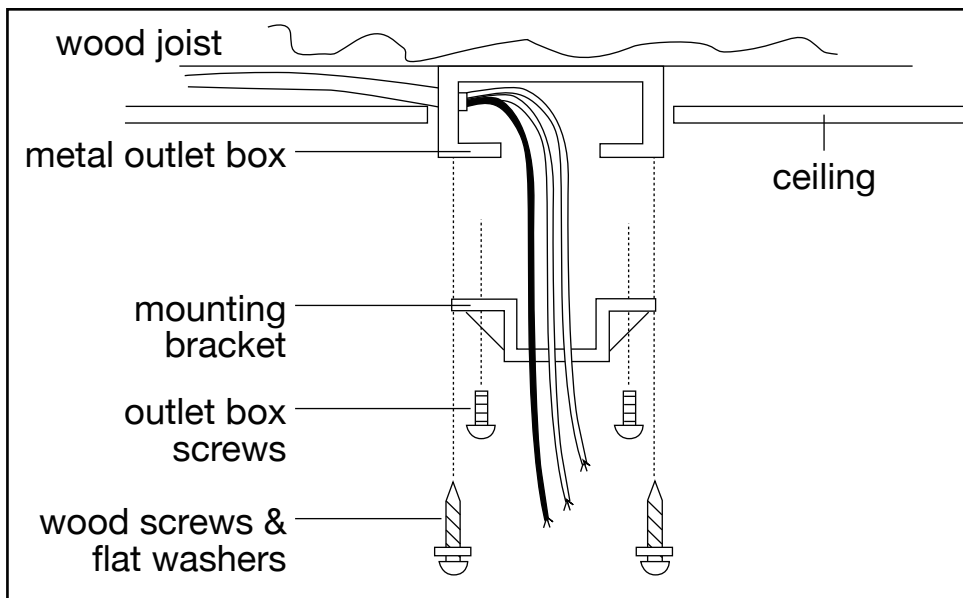

INSTALLATION

3. HOOKING UP SAFETY CABLE (DOWNROD MOUNT)


- obtain fan and place hemisphere of downrod into mounting bracket
- rotate fan until the slot in the hemisphere locks into the tab of the mounting bracket
- place looped end of safety cable over the wood screw and flat washer not previously tightened (in Step 3)
- tighten above wood screw securing the safety cable

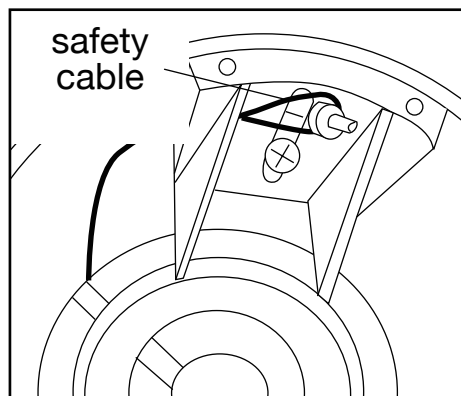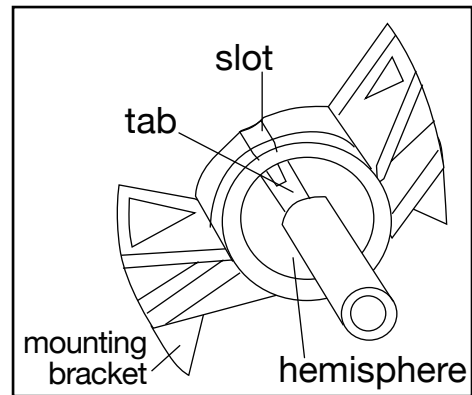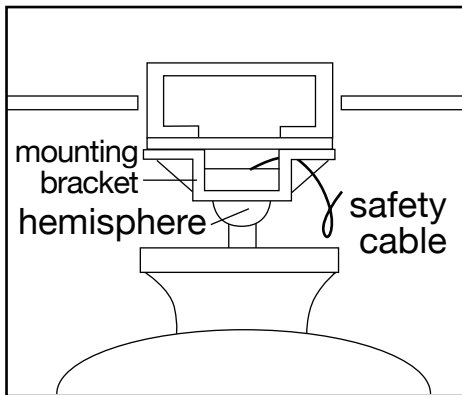


INSTALLATION

4. PREPARING THE RECEIVER AND REMOTE CONTROL

This remote control unit is equipped with 16 code combinations to prevent possible interference from or to other remote units. The frequency switches on your receiver and remote control have been preset at the factory. Please recheck to make sure the switches on the remote control and the receiver are set to the same position. Any combination of settings will operate the fan as long as the remote control and receiver are set to the same position.

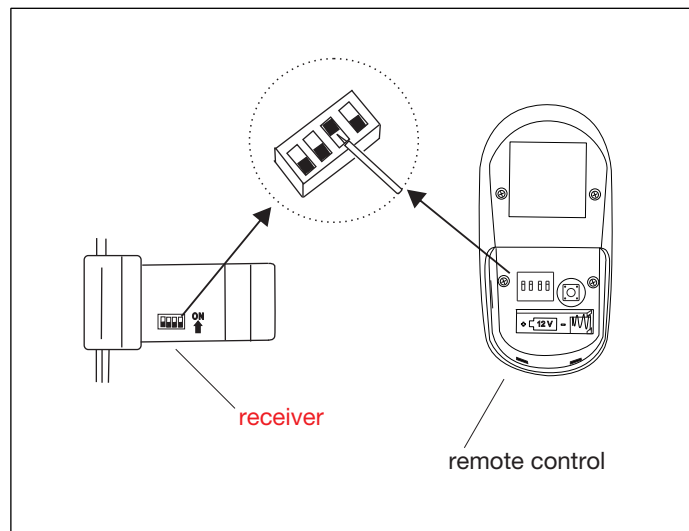


Insert the receiver into the mounting bracket with the flat side of the receiver facing the ceiling.

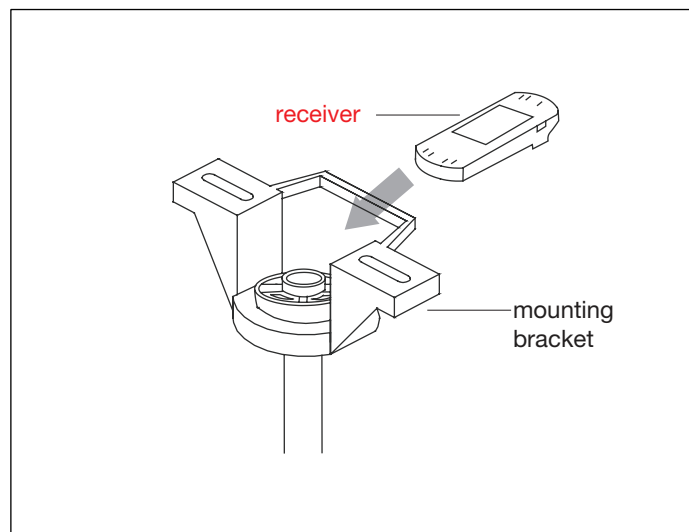

INSTALLATION

5. MAKING THE ELECTRICAL CONNECTIONS


There are several different wiring combinations that can be used in controlling your ceiling fan to meet your specific requirements. Should the following method not meet your requirements call or visit your nearest Canarm distributor for a full list of fan accessories.

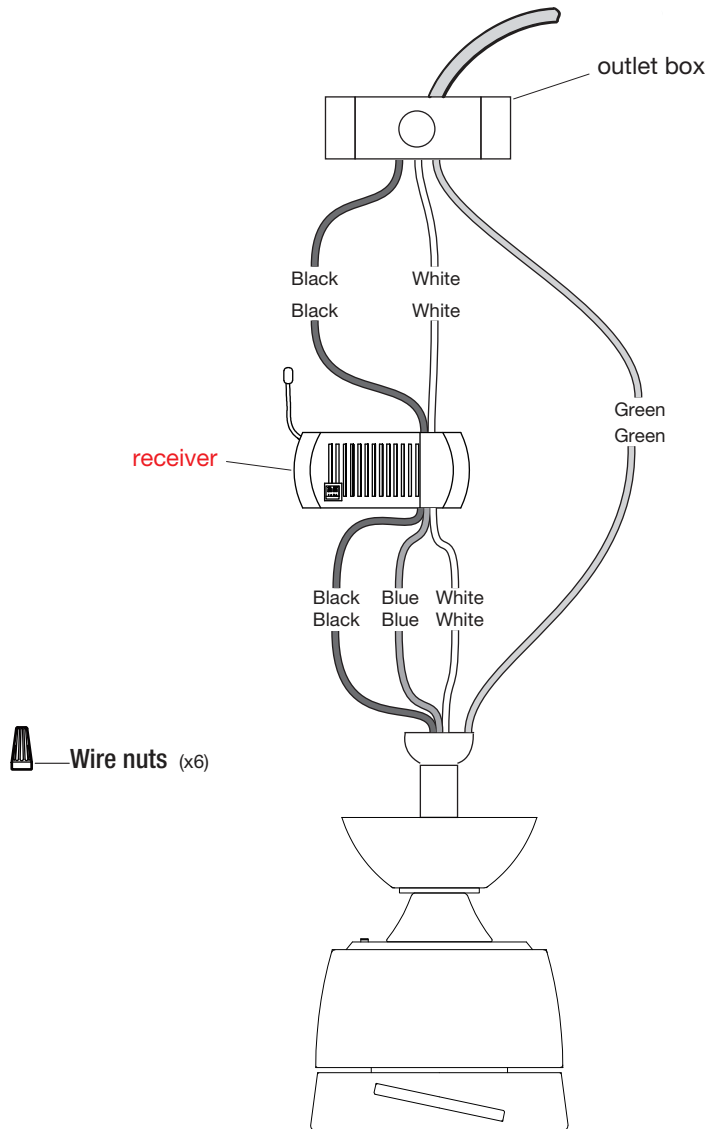

After connecting the wires, spread them apart so that the green and white wires are on one side of the outlet box and the black and blue wires are on the other side. Carefully tuck the wire connections up into the outlet box.

INSTALLATION

6. SECURING THE FAN MOTOR ASSEMBLY TO THE MOUNTING BRACKET

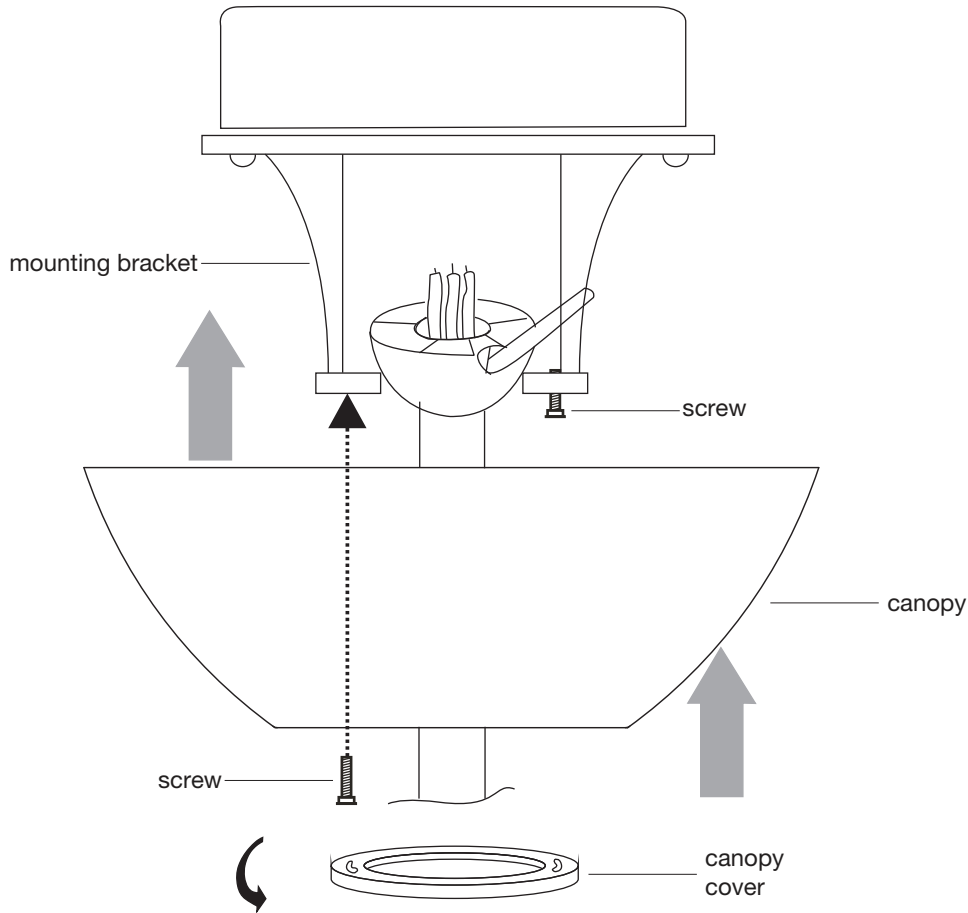

Remove one screw from the mounting bracket and loosen the other screw approximately 1/4 turn.


Carefully raise the canopy up to the mounting bracket, and ensure the loosened screw is inserted into the key hole on the canopy. Rotate the canopy clockwise.

Secure the canopy by replacing the screw previously removed and tightening the screw previously loosened.

Place the canopy cover on the canopy, and rotate the canopy cover clockwise until it locks into position.

INSTALLATION

7. BLADE INSTALLATION

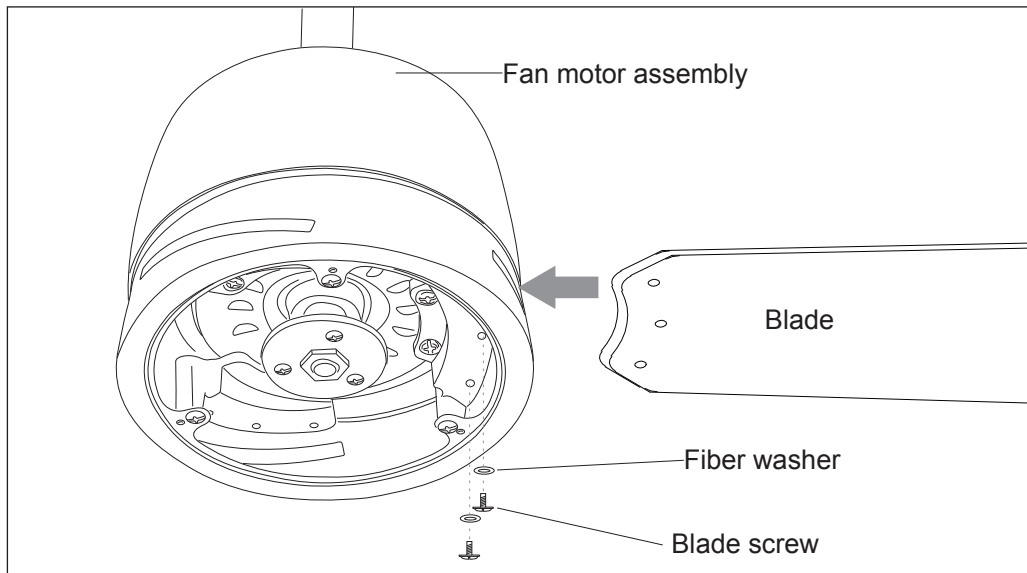


Insert the blades through the slots on the fan motor assembly.

Attach the fan blades to the fan motor assembly using the blade screws and fiber washer and tighten them securely.

Repeat this step for the other blades.

INSTALLATION

7. INSTALLING THE LIGHT KIT

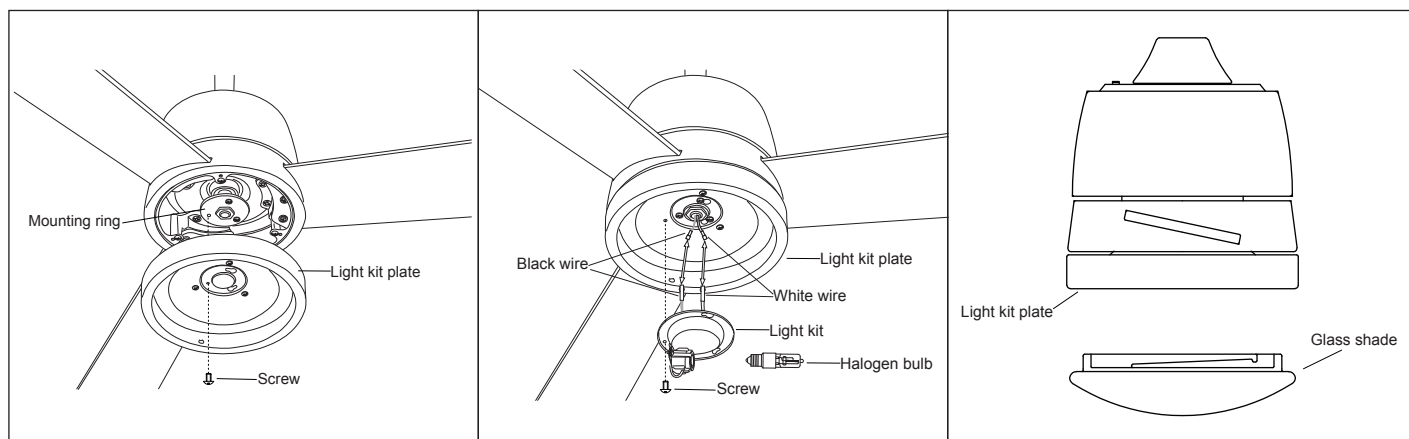

ATTENTION: The Energy Policy Act of 2005 requires this fan to be equipped with a 190 watt limiting device, If lamping exceeds 190watts, the ceiling fan's light kit will shut off automatically.

Remove one of three screws from the fan motor assembly mounting ring, and loosen the other two screws, but do not remove.

Place the key holes from the light kit plate over the two screws previously loosened from the fan motor assembly mounting ring. Turn the light kit plate until it locks in place at the narrow section of the key holes. Secure by tightening the two screws previously loosened and the one screw previously removed.

Remove one of three screws from the light kit plate, and loosen the other two screws, but do not remove.

Connect the white wire from the fan motor assembly to the white wire from the light kit.

Connect the black wire from the fan motor assembly to the black wire from the light kit.


Place the key holes from the light kit over the two screws previously loosened from the light kit

plate. Turn the light kit until it locks in place at the narrow section of the key holes. Secure by tightening the two screws previously loosened and the one screw previously removed.

Install the halogen bulb into the socket located in the light kit.

Attach the glass shade to the light kit plate by twisting tightly.

CEILING FAN OPERATION

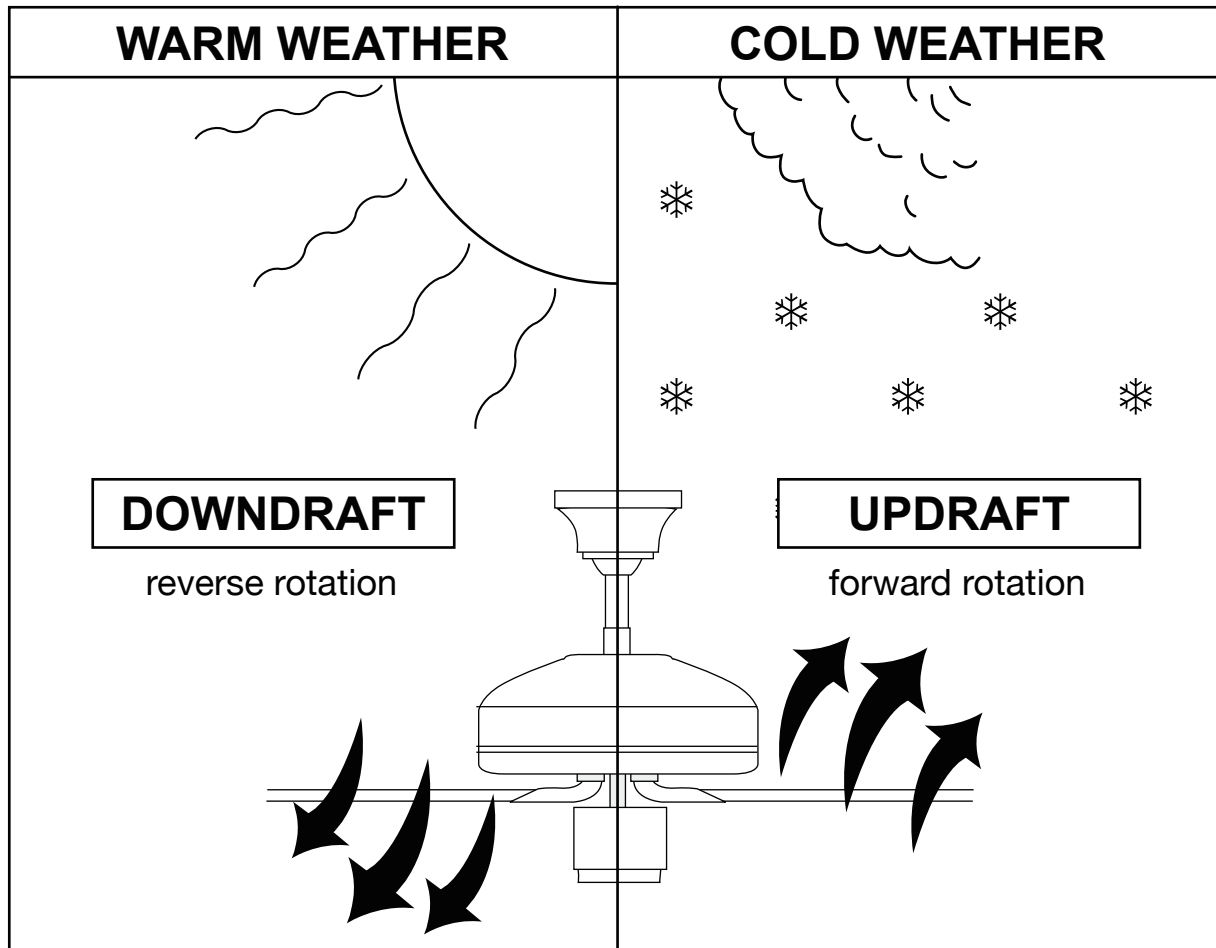

INSTRUCTIONS

Restore power to the ceiling fan and test for proper operation.

“ ●, ●●, ●●● ” buttons: Sets the fan speed.

“ ⏻ ” button: Turns the fan off.

“ 💡 ” button: Turns the light ON or OFF. Press and hold the button to set the desired brightness.

The reverse switch is located on the coupling. This switch controls directions: forward (switch down) or reverse (switch up).

NOTE: Wait for the fan to stop before reversing the direction of the blade rotation.

Warm weather - (Counterclockwise Direction) A downward air flow creates a cooling effect. This allows you to set your air conditioner on a higher setting without affecting your comfort.

Cool weather - (Clockwise Direction) An upward air flow moves warm air off the ceiling. This allows you to set your heating unit on a lower setting without affecting your comfort.

TROUBLE SHOOTING

TROUBLE	SUGGESTION
Fan will not start	• check fuses and circuit breakers • check wiring connections to the fan • check wiring connections in switch housing *CAUTION: Turn power off for last two items
Fan sounds noisy	• check to make sure that all screws in motor housing are snug • check to make sure that blade bracket screws are tight • check to make sure marrettes in switch housing are not rattling against the wall of the switch housing • if fan has a light kit make sure switch housing, screws and set screws are tight • some fan motors are sensitive to signals from solid state variable controls. If solid state controller is used, change to alternative control (See a Canarm representative for a list of available controls.) • allow a 24 hour break in period to eliminate noises
Fan wobbles or shakes excessively	• check that all blades are screwed firmly into blade brackets • check that all blade brackets are secured firmly to motor • check distance from tip of blades to ceiling. Gently bend the blade brackets up or down until all distances are the same • check distance between blade tip to blade tip. All measurements should be equal. Loosen blade screws and position blade until even then re-tighten • check that the downrod hemisphere notch is engaged in canopy • check to make sure that jam screws in downrod are tightened • make sure canopy and mounting bracket are tightened securely to wooden joist • make sure warpage has not occurred in wooden blades. If so, contact the Canarm customer service department for replacement parts • occasionally slight weight variations can be caused by moisture during transportation. All fans are supplied with balancing kits and installation instructions to eliminate this problem



CANARM LTD.
2157 Parkedale Ave.
Brockville, Ontario
K6V 5V6
PH: 613-342-5424
FX: 613-342-8437

CANARM LTÉE.
2555 Rue Bernard Lefebvre
Laval, Quebec
H7C 0A5
PH: 450-665-2535
FX: 450-665-0910

CANARM 5 YEAR LIMITED WARRANTY

“THANK YOU” for purchasing a Canarm product. It is our policy to furnish you with high quality products at a fair price. With proper installation your fan should provide you with years of money saving comfort.

This fan is guaranteed to be free from defects in workmanship and material for a period of five (5) years from date of purchase. Within the first (1) year from date of purchase any defective product should be returned to your RETAIL OUTLET along with proof of purchase. For the balance of the warranty, four (4) years, the MOTOR WINDINGS ONLY, shall be free of defects. We will correct such defects or replace the motor assembly at our option if the product is returned, FREIGHT PREPAID, to Canarm. The returned fan must be accompanied by your proof of purchase and a cheque for \$20.00 for handling and labour charges.

All costs of removing and re-installing the product are YOUR RESPONSIBILITY. Damage to any part as such by accident, misuse, improper installation or by affixing any accessories IS NOT covered by this warranty. As a result of varying climatic conditions in our area this warranty does not cover any changes in finishes, including rusting, pitting, corroding, tarnishing or peeling.

WARRANTY VOID: In cases of alteration, abuse, installation not in accordance with instructions or REMOVAL of the cUL Sticker.