



Package Contents

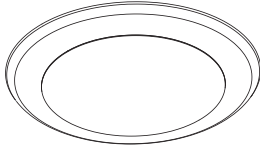

LED Disk Fixture (1)




 Mounting Screws (2)




4-Port Connectors (3)


Installation

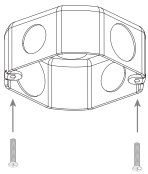


1 Insert the included mounting screws into the junction box. Fixtures are compatible with 2.75", 3.5" and 4" j-boxes.

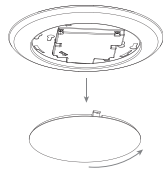


2 Remove the lens from the fixture by twisting it counter clockwise.

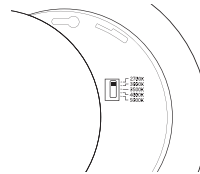


3 Locate the CCT switch on the center of the disk and select your desired setting.

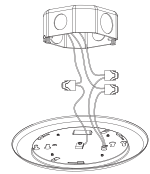


4 Use included 4-port connectors to connect the wires. Ensure the copper ground is secure. Arrange the wires into the back of the junction box.

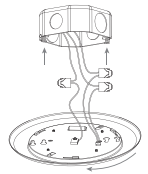

5 Align the holes on the fixture with the mounting screws. Attach the fixture to the junction box by twisting clockwise until it locks into place.

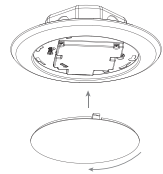

6 Reinstall the lens onto fixture by rotating the lens clockwise until it locks in place.

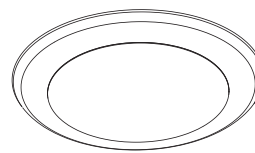

7 Restore the power and test to confirm that the fixture is functioning properly.

! WARNING

1. Read all installation instructions before beginning. If you have any doubts about how to install this lighting fixture, or if the fixture fails to operate completely, consult a qualified electrician to ensure correct branch circuit conductor.
2. This fixture is designed for use in a circuit protected by a fuse or circuit breaker.
3. Always be sure that power supply is turned off at fuse box or circuit breaker before installing, cleaning, or servicing the fixture.
4. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.