

MPulse™ Canopy Bird Cover Installation Instructions



General Safety Information

To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.

Models:

MP-CPBIRDCOVER-B (Bronze)

MP-CPBIRDCOVER-S (Silver)



Picture is for illustration purposes only.
Your model may vary.

1. Slide the bird covers into place on the top side of the canopy fixture. Ensure that the clearance holes in the covers align with the threaded holes in the fixture (refer to **Fig. 1**).
2. Secure the bird covers to the fixture using the eight (8) M4 screws provided with the covers (refer to **Fig. 2**).

Fig. 1

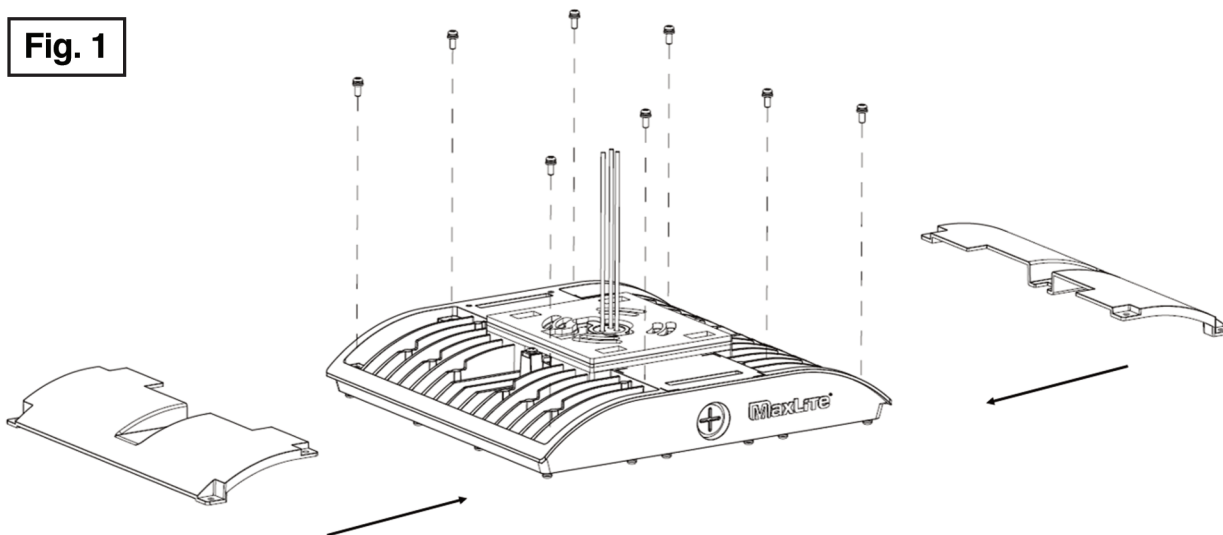


Fig. 2

