

MaxLite® LED Security Fixture (With Lamp)



General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For Residential installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- **DO NOT INSTALL DAMAGED PRODUCT!**
- This fixture is intended to be connected to a properly installed and grounded UL listed junction box.

WARNING:

RISK OF ELECTRICAL SHOCK

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- Make all electrical and grounded connections in accordance with the National Electrical Code and any applicable local code requirements.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION:

RISK OF INJURY

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.

CAUTION:

RISK OF FIRE

- Keep combustible and other materials that can burn away from luminaire and lamp/lens.
- **MIN 60°C SUPPLY CONDUCTORS**

Models:

SECCE Series



Picture is for illustration purposes only. Your model may vary.

MaxLite® LED Security Fixture (With Lamp)



General Wiring Diagram

CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.

Connecting panels to AC source supply:


All units must be individually connected to the AC supply.

Black = Line

White = Common

Green = Ground

- 1.) Connect the black fixture wire to the (+) LINE supply wire.
- 2.) Connect the white fixture wire to the (-) COMMON supply wire.
- 3.) Connect the green fixture wire to supply ground wire.

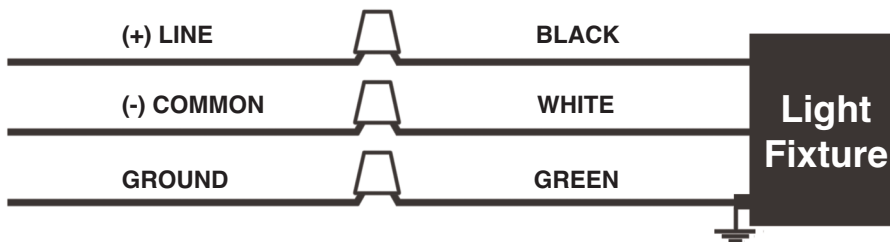


Installation & Operation - Ceiling Mount

▲WARNING

Disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

Note: Lighting Fixture must be located on ceiling, lamp socket opened down, and not be recessed and cannot be mounted upside down in wet locations.

1. Turn off power to branch circuit.
2. Fixtures are mounted using a crossbar attached to a customer supplied junction box (**Fig. 1**). Screw the crossbar into the junction box using (2) supplied 8/32 screws. (**Fig. 2**)
3. Make electrical connections as above General Wiring diagram and carefully push wires into junction box (**Fig. 3 & Fig. 4**).
4. Tighten the mounting plate using Screws provided. Fasten the fixture until it is held firmly to the wall. (**Fig. 5**)
5. Install "Enclosed Rated" self ballasted LED lamp (as provided.) (**Fig. 6 & Fig. 7**)
6. Thread the shade into and tighten firmly. Be sure not to cross thread. (**Fig. 8**)
7. Seal canopy with weatherproof silicone sealant. (**Fig. 9**)
8. Restore power to branch circuit.

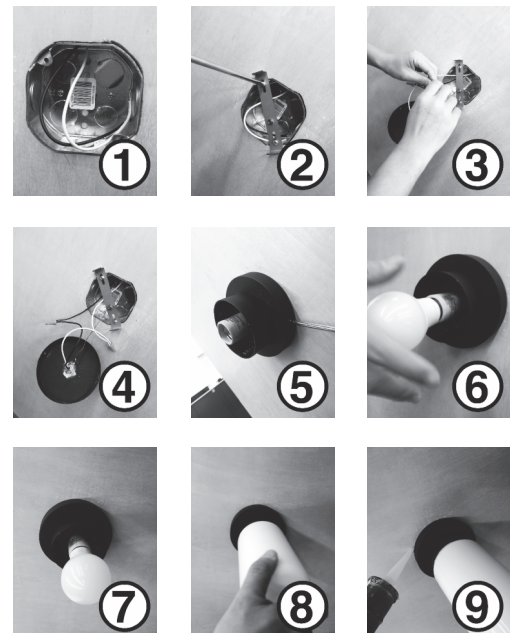

MaxLite® LED Security Fixture (With Lamp)



Installation & Operation - Wall Mount

⚠ WARNING

Disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

Note: Lighting Fixture must be located on wall, lamp socket opened down, and not be recessed and cannot be mounted upside down in wet locations.

1. Turn off power to branch circuit.
2. Fixtures are mounted using a crossbar and universal nipple attached to a customer supplied junction box (**Fig. 1**).
3. Make electrical connections as above General Wiring diagram and carefully push wires into junction box (**Fig. 3 & Fig. 4**).
4. Place fixture over nipple and secure it with the acorn nut. Fasten the fixture until it is held firmly to the wall. (**Fig. 5**)
5. Install "Enclosed Rated" self ballasted LED lamp (as provided.) (**Fig. 6 & Fig. 7**)
6. Thread the shade into and tighten firmly. Be sure not to cross thread. (**Fig. 8**)
7. Seal canopy with weatherproof silicone sealant. (**Fig. 9**)
8. If you do not wish to use the photocell, screw included photocell cap over the photocell sensor. (**Fig. 10**)
9. Restore power to branch circuit.



Re-Lamping

Caution: Be sure fixture temperature is cool enough to touch. Prior to installing, check that the lamp is of proper type and wattage. Observe lamp manufacturer's recommendations on lamp orientation, ballast type and burning positions.

1. Unscrew globe or cylinder enclosure (keep for reinstallation).
2. Install appropriate lamps. Do not overtighten. Overtightening will cause stripping and void all warranties.
3. Reinstall globe or cylinder.

MaxLite® LED Security Fixture (With Lamp)**Warranty Information**

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the date of original purchase from MaxLite or its authorized distributor/dealer (the "Warranty Period"), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite's website (at <http://maxlite.com/resources/warranties>) for the complete terms and conditions of our warranty.

Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.