

Installation Instructions

NRS90-P17

7-1/2" to 11-1/2" Adjustable Power Feed Stem for Rail

READ PRIOR TO ATTEMPTING INSTALLATION
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN

⚠ WARNING - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition to the National Electric Code and all applicable state and local building codes. The final installation must be approved by the appropriate qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

⚠ AVERTISSEMENT - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite en conformité avec l'édition actuelle du Code national de l'électricité et toutes étatiques et locales codes du bâtiment applicables. L'installation finale doit être approuvée par l'inspecteur en électricité / bâtiment qualifié approprié(s). Une mauvaise installation peut entraîner un incendie ou un risque électrique. Soyez sûr de la puissance électrique vers le circuit a été coupée avant l'installation de ce système électrique.

- Save and read all instructions prior to installation
- Do not install rail system in damp or wet locations
- Do not install rail system less than 5 feet above the floor
- Do not install any fixture closer than 6 inches from any curtain or similar combustible material
- Disconnect electrical power before adding or changing any components on rail system
- Do not attempt to energize anything other than lighting fixtures on rail system. Do not attempt to connect power tools, extension cords, appliances or similar items to rail system.
- Rail system is not intended for use with a power supply cord and plug
- Rail system is to be supplied by a single branch circuit
- Stem mounted rail systems are intended to be supported by stem mounts and not by cable. Stems are to be mounted 30 inches apart.

CANOPY INSTALLATION INSTRUCTIONS

REQUIRES: NRS90-P13 (Ordered Separately)

1. Turn off power.
2. Loosen canopy screws (NRS90-P13 - ordered separately) to release junction box bracket from keyhole slots. (Figure 1)
3. Attach stem to canopy.
4. Connect 120V supply wires to adjustable stem wires. (Figure 2)
Note: Connect ground wire on junction box bracket to supply ground wire
5. Attach junction box bracket to junction box. (Figure 3)
6. Place canopy over junction box bracket and tighten screws (Figure 4)

Figure 1

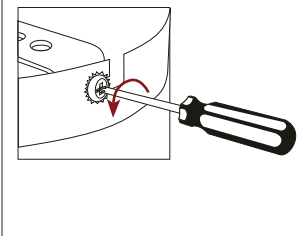


Figure 2

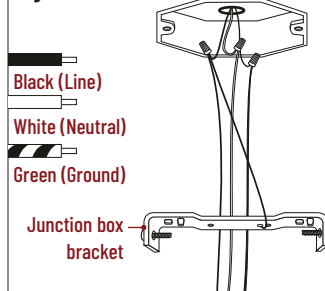


Figure 3


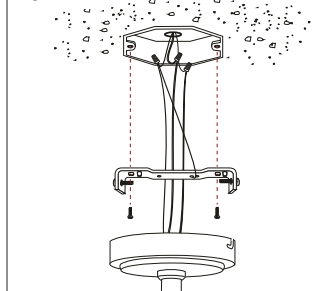


Figure 4

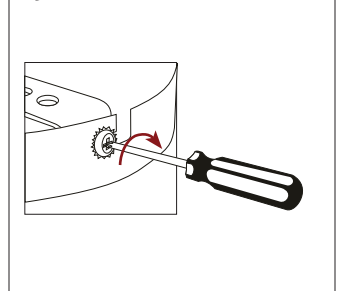

ATTACHING TO RAIL SYSTEM

1. Remove two set screws to open rail adapter. (Figure 1)
2. Insert rail into adapter with copper conductor on top of rail. (Figure 2)
3. Close rail adapter and replace screws. (Figure 3)

Figure 1

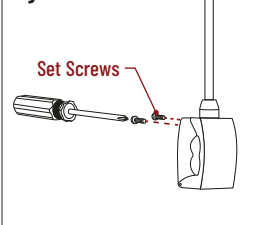


Figure 2


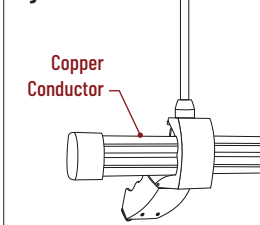


Figure 3



ADJUSTING STEM LENGTH

1. Remove set screw with allen wrench (included).
2. Adjust stem to desired length.
3. Replace set screw.

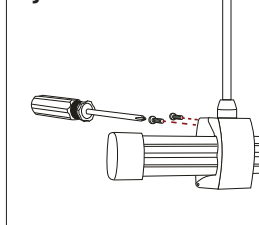