



Tools Required

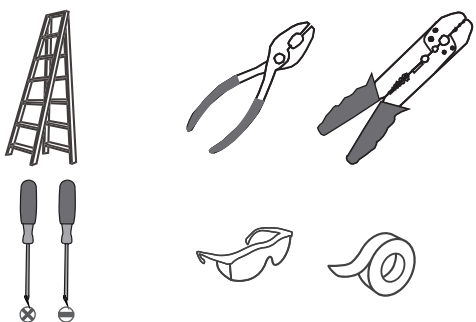

Light Source

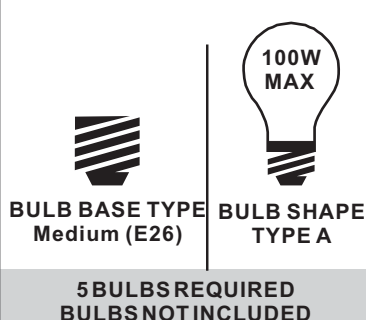

Fixture Height Adjustable 11.75" to 47.75"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

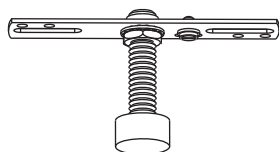


A Crossbar Assembly
x 1




B Outlet Box Screw
x 2




C Wire Connector
x 3

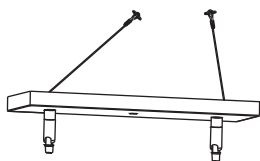


D Ceiling Canopy
x 1

 

E 6" L Rod
x 4

 


F 12" L Rod
x 4

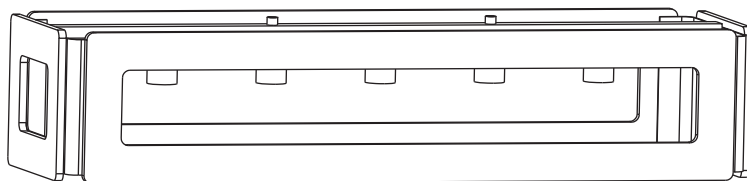

G Fixture Body
x 1




Table of Contents

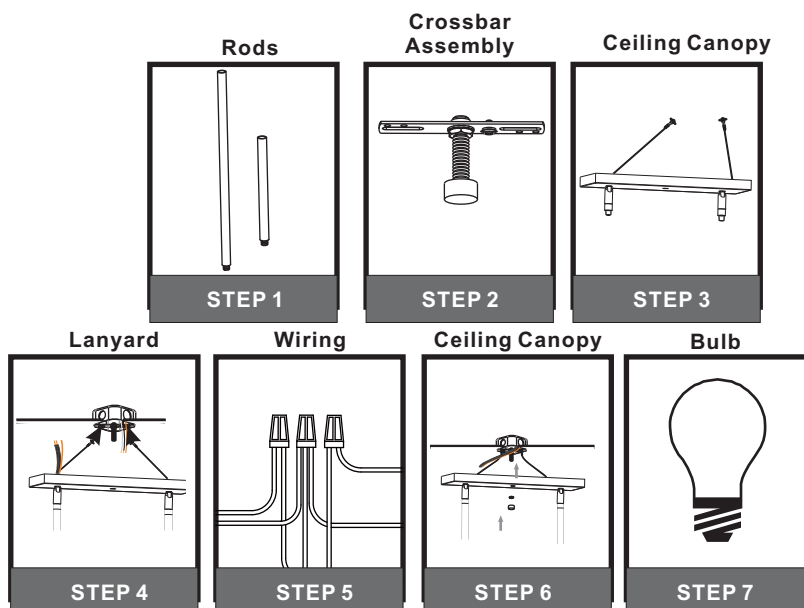

STEP 1

Optional Rods

 8' ceiling:
(4) 6"L + (2) 12"L rods
9' ceiling:
(4) 6"L + (4) 12"L rods

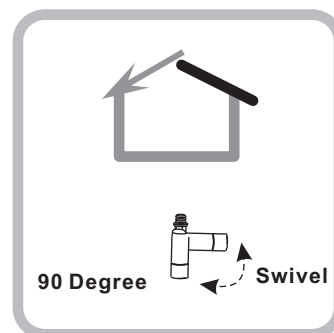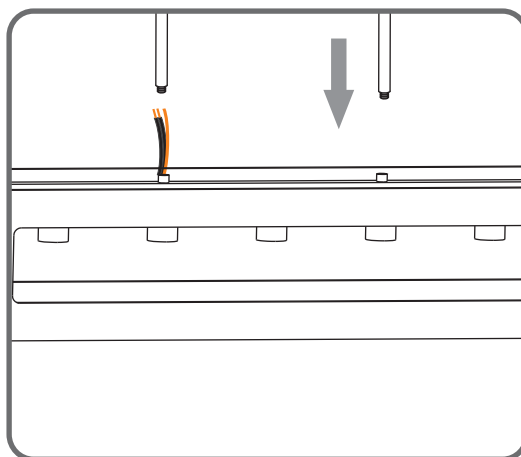


For angled ceilings,
Swivel opening towards wall.

STEP 2

1

Step 1


Install crossbar assembly

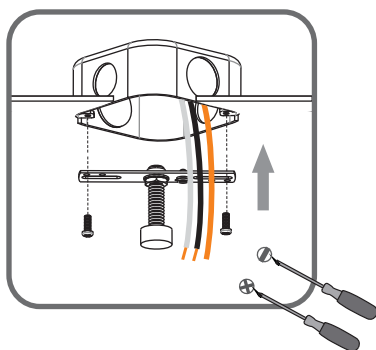


2

Step 2 - 3


Test fitting ceiling canopy to nipple

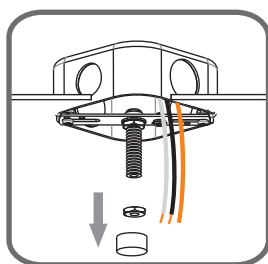


3

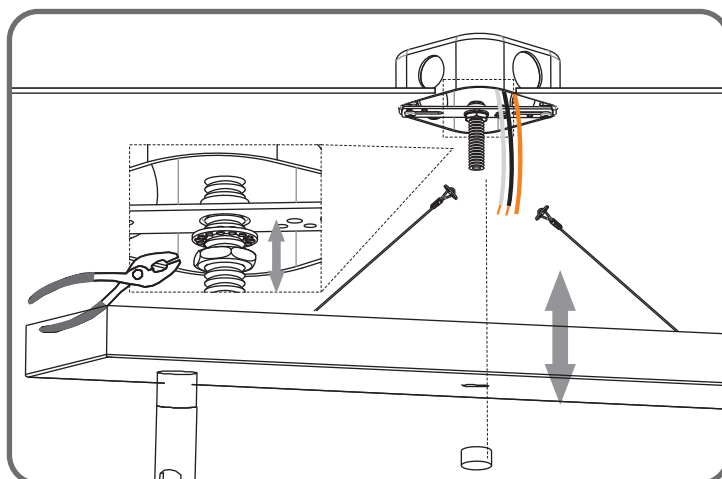


STEP 3

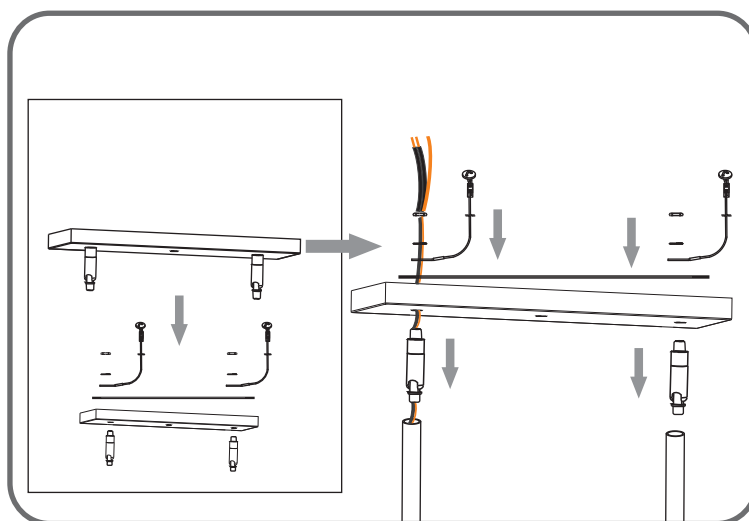


STEP 4

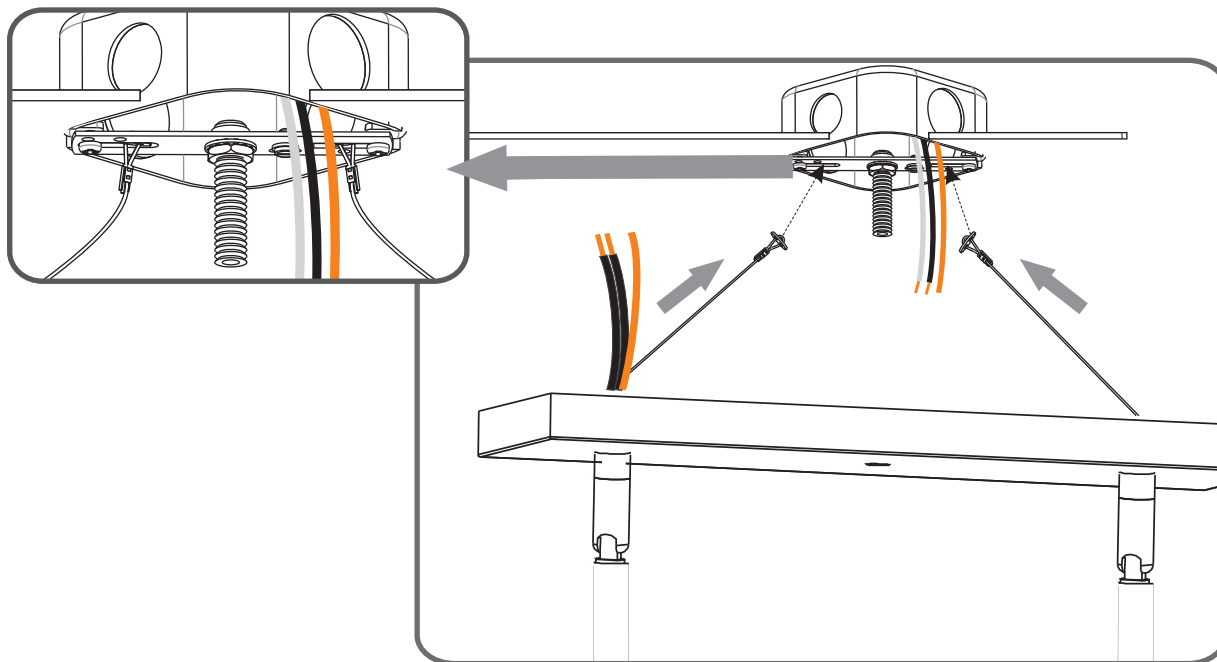

STEP 5

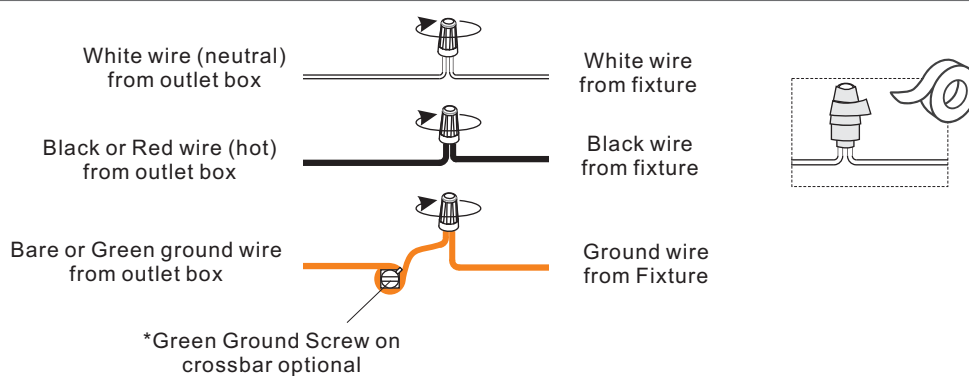

STEP 6

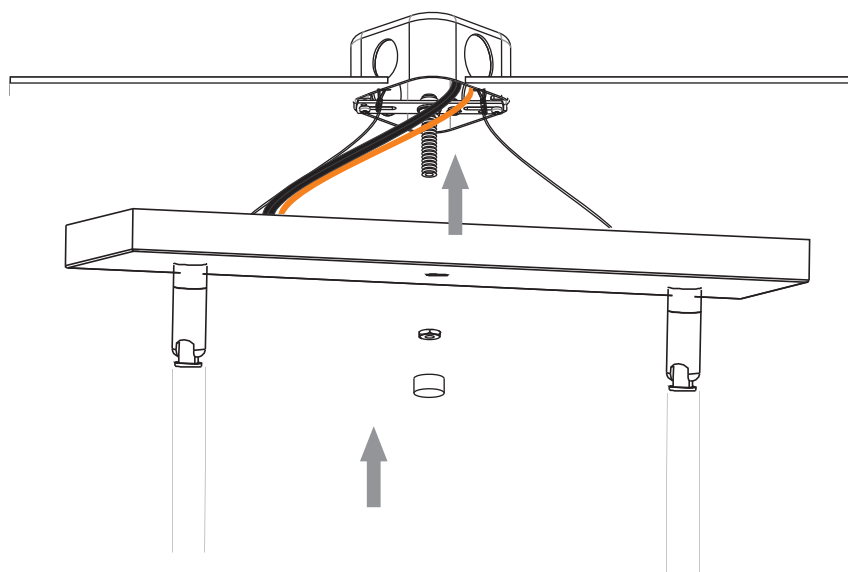

STEP 7

