



Tools Required

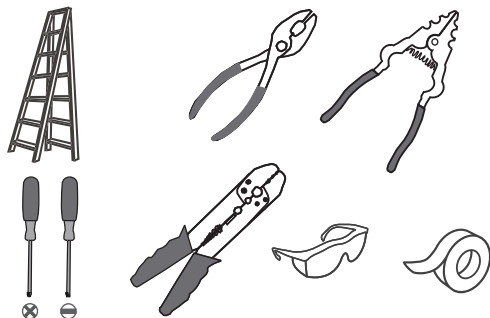

Light Source

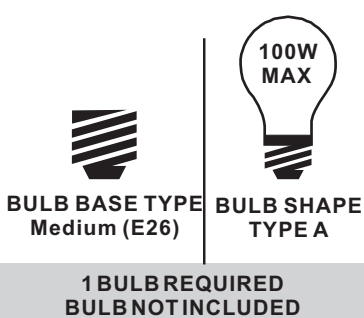

Fixture Height Adjustable 10.25" to 46.25"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

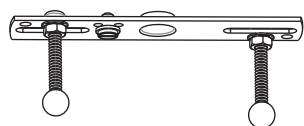


A Crossbar Assembly
x 1




B Outlet Box Screw
x 2



C Wire Connector
x 3

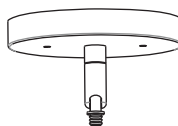


D Ceiling Canopy
x 1

 

E 6" L Rod
x 2




 F 12" L Rod
x 2



G Socket Assembly
x 1


H Shade (Varies according to style purchased)
x 1

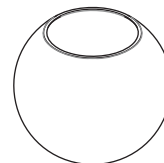

Note: Shade shape is for illustration purpose only. Your shade shape may vary from illustration.

Table of Contents

Crossbar Assembly

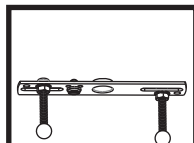


STEP 1

Downrod




STEP 2

Wiring

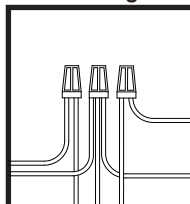


STEP 3

Ceiling Canopy

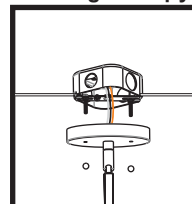


STEP 4

Shade & Bulb

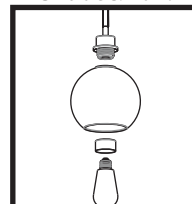


STEP 5

STEP 1


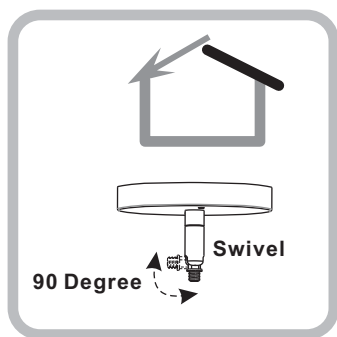


For angled ceilings,
Swivel opening towards wall.


1 Step 1 Install crossbar assembly

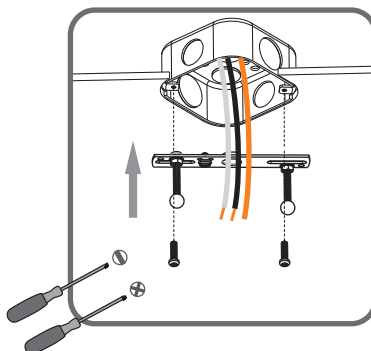



2 Step 2 - 3 Test fitting ceiling canopy to mounting screws

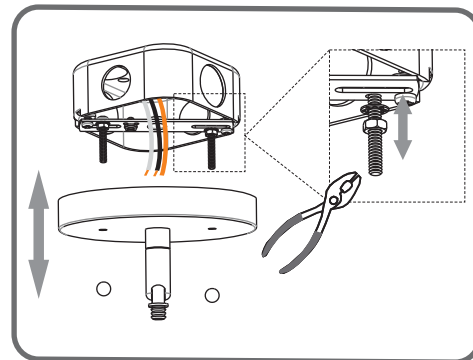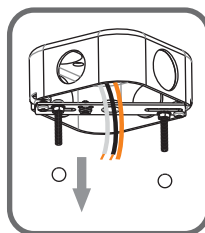


STEP 2

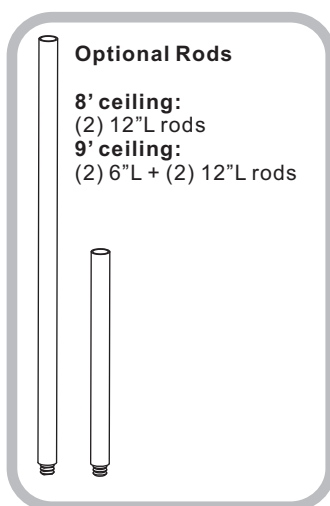


1 2

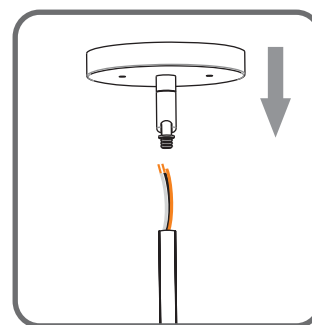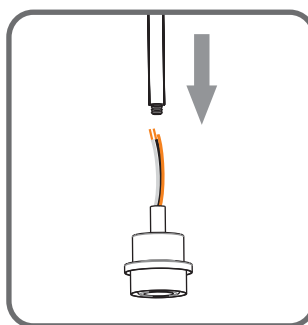

STEP 3

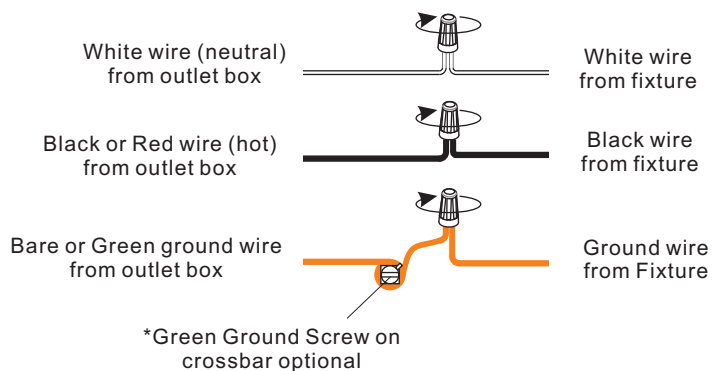


STEP 4

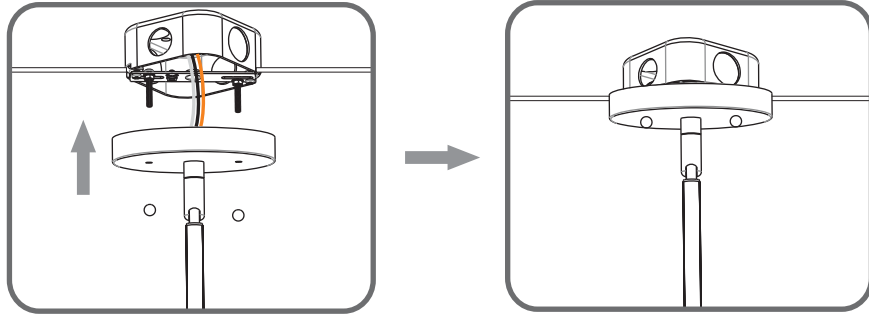

STEP 5

1

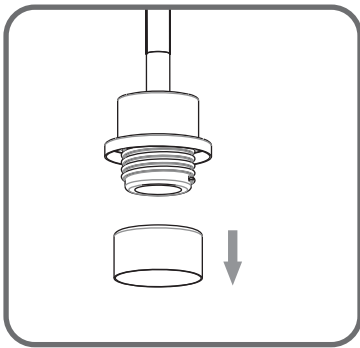

2

Note: Shade shape is for illustration purpose only. Your shade shape may vary from illustration.

