 
 


Tools Required

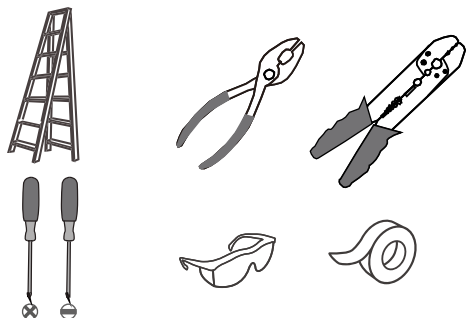

Light Source

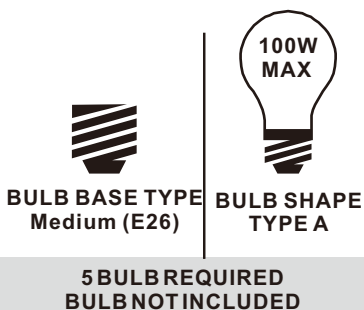

Fixture Height Adjustable 18" to 48"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG



 
 
 
 
 
 
 


Table of Contents

 
Crossbar Assembly

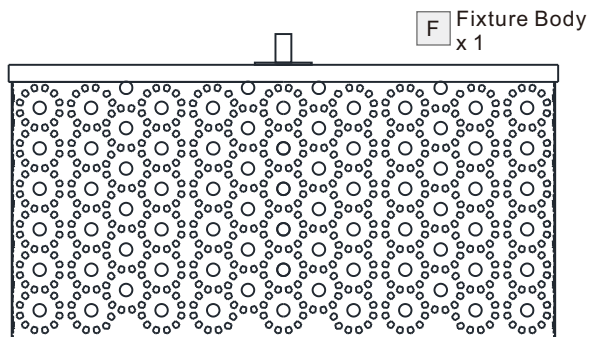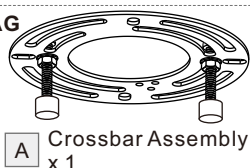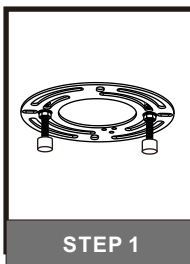


Downrod

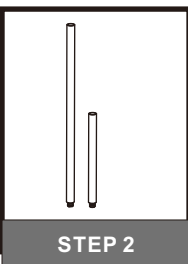 


Lanyard

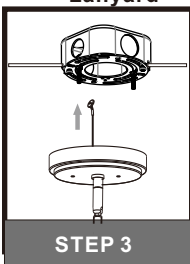 


Wiring

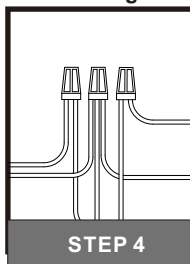 


Ceiling Canopy

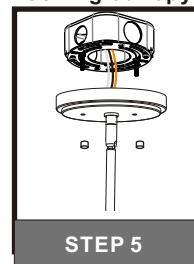 

Bulb and Diffuser

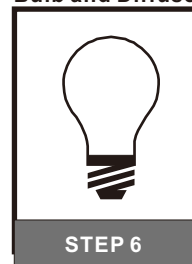 


 STEP 1


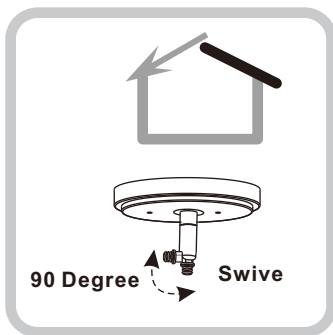


For angled ceilings,
Swivel opening towards wall.

 1 Step 1 Install crossbar assembly

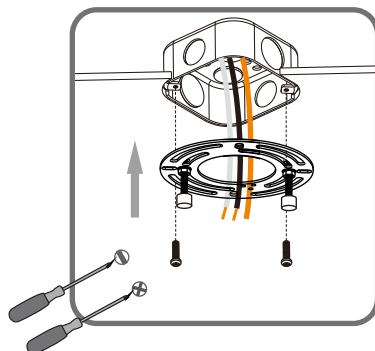

  2 Step 2 - 3 Test fitting ceiling canopy to mounting screws

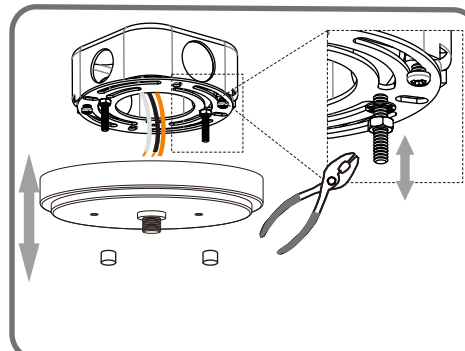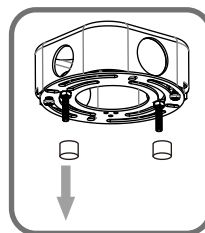


STEP 2

Optional Rods


8' ceiling:
(2) 6"L + (1) 12"L
rods
9' ceiling:
(2) 6"L + (2) 12"L
rods



 
1

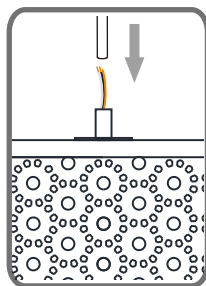


2

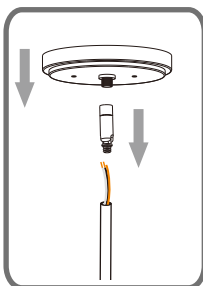 

3


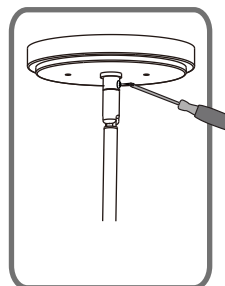 


OPTION 1


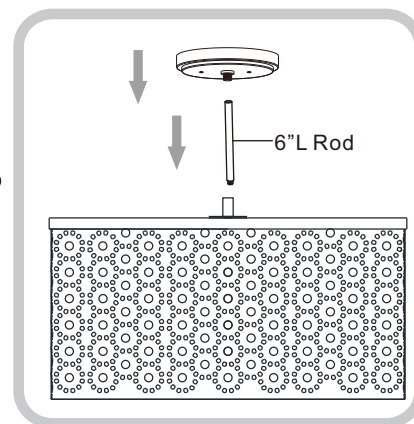 


OPTION 2

  
STEP 3

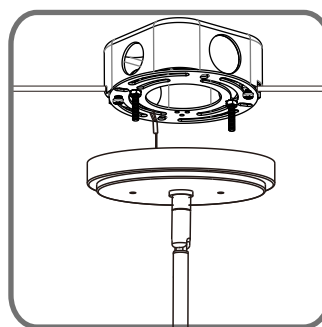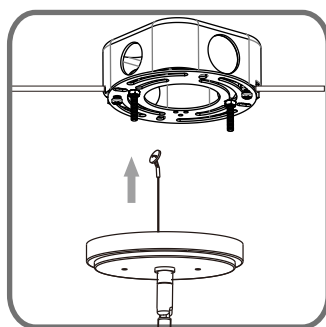

  STEP 4

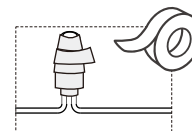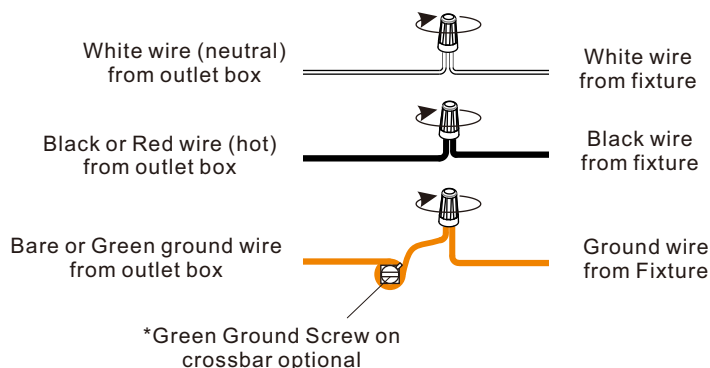

 STEP 5

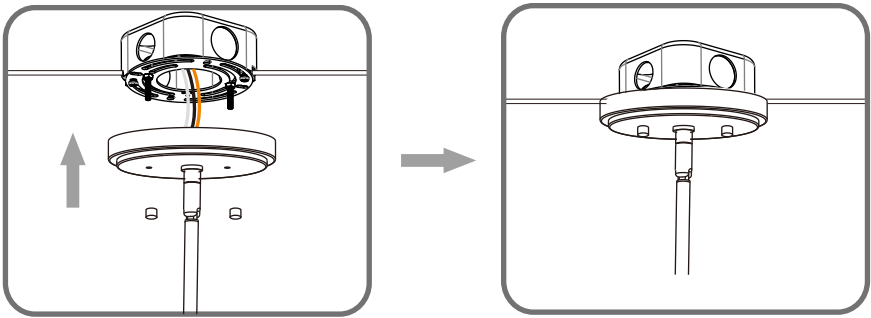

STEP 6

