

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) / 1-800-567-2513 (French)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.



"INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS"

"READ ALL INSTRUCTIONS"

"IMPORTANT SAFETY INSTRUCTIONS"

"SAVE THESE INSTRUCTIONS"






SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
DO NOT REMOVE INSULATION FROM FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CAUTION – RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
4. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
5. NOT FOR USE IN LUMINAIRES CONTROLLED BY A DIMMER.

NOTE: Product May Not Look Exactly As Shown In Figures.

Note: Your fixture may have either one or two sockets depending on the model.

INSTALLATION:

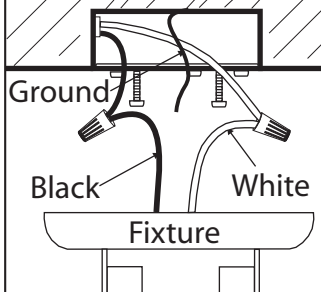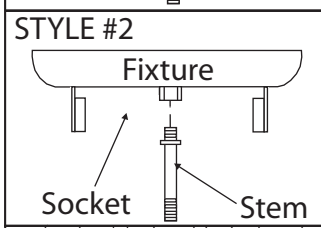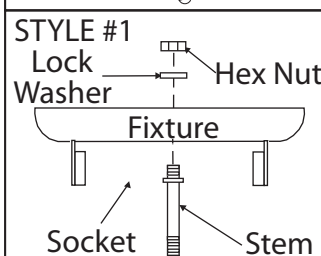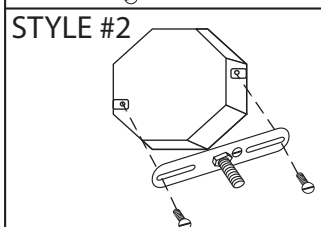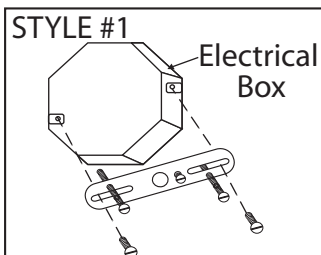

NOTE: This product will be style #1 or #2 but you don't have the option of both.

1. Style #1: Install the mounting bracket to the electrical box using two electrical box screws. (Note: Do not adjust the two support screws at this time.)







Style #2: Attach mounting bracket to wiring box with wiring box screws.

Note: Your fixture may have either one or two sockets depending on the model.

2. Style #1: Attach the stem to the fixture using a lock washer and hex nut.

Style #2: Secure the centre stem onto the screw stud.

3. Connect the ground wire (bare copper or green) from your fixture to the ground Wire (bare copper or green) or ground screw in the electrical outlet box. Connect black wire from fixture to black wire in outlet box and connect the white wire from fixture to white wire in outlet box.

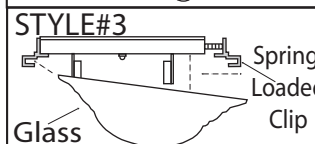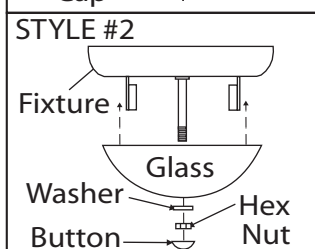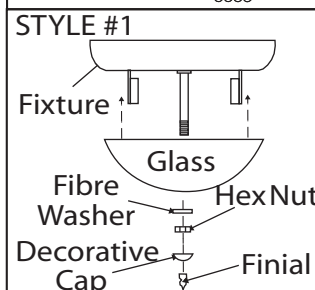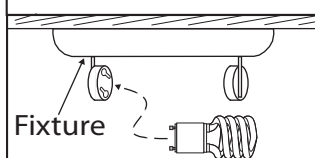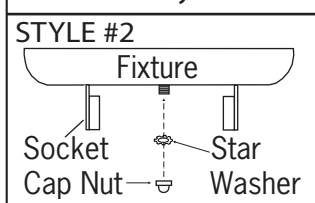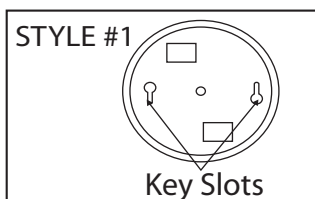

4. Style #1: Tuck the electrical wires into the electrical box and position the "key slots" over the support screws. Turn and lock the support screws into the "key slots". Tighten the support screws into place.

Style #2: Install the pan through the centre screw stud. Secure the pan using a lock washer and hex nut.

5. Install the proper bulb type and wattage.

6. Note: Refer to the style of assembly that matches the style of your fixture.

Style #1: Secure the glass in place using the decorative cap, hex nut, fibre washer and finial.

Style #2: Secure the glass in place using the fiber washer, hex nut and button.

Style #3: Install the glass shade by pulling the decorative clip that is spring loaded outward. Position the edge of the glass into the other two clips and hold flat against fixture. Release the spring loaded clip over the edge of the glass to secure in place.

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver



Wire Cutters



Pliers



Wrench

Wiring supplies
as required by
the Canadian
Electrical Code
and/or the
Quebec
Electrical code