



BATHROOM WALL FIXTURE

V-1
01/06


QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English)

1-800-567-2513 (French)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.

TOOLS AND MATERIALS REQUIRED:



Blade Screwdriver



Wire Cutters



Pliers


Wiring supplies
as required by
electrical code

SAFETY PRECAUTIONS:


- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
DO NOT REMOVE INSULATION FROM FIXTURE.**
- 2. CAUTION – RISK OF FIRE.**
- 3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE
BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE
HAZARDS INVOLVED.**

NOTE: Product May Not Look Exactly As Shown In Figures.


INSTALLATION:

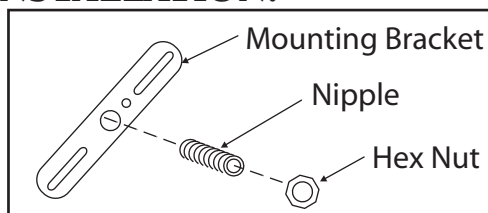


1. Attach nipple to mounting bracket. Adjust so it will clear hole in back of fixture and then lock nipple in place with hex nut.

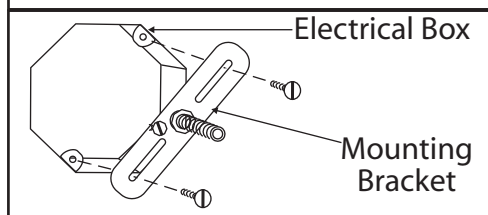


2. Attach mounting bracket to electrical box with electrical box screws (not included).

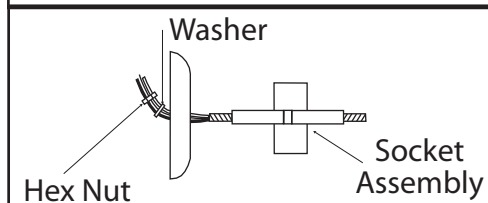


3. Attach the socket assembly to the canopy with a washer and a hex nut.

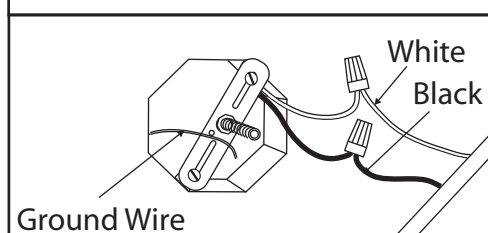

4. Connect the ground wire to the ground screw in the electrical box. Attach the black wire (or wire marked "SPT-1") from the light fixture to the black wire in the electrical box. Attach the white wire from the light fixture to the white wire in the electrical box.

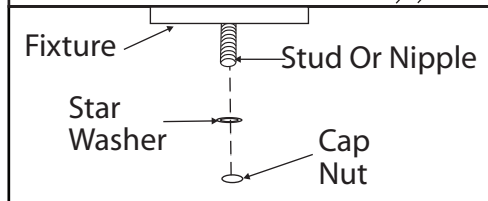

5. Tuck electrical wires into outlet box and position fixture over studs or nipple on mounting bracket assembly. Secure fixture in place with star washer(s) and cap nut(s).

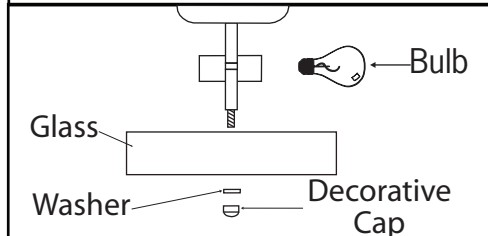

6. Install proper bulb type and wattage (MAX 60W Type A each socket).

7. Secure the glass in place using the decorative cap and washer.

QUESTIONS OU INFORMATION COMMUNIQUE:

1-800-265-1833 (Anglais)

1-800-567-2513 (Français)

Du lundi au vendredi entre 8:00H et 17:00H H.N.E.

TOOLS AND MATERIALS REQUIRED:



Tournevis à
Lame



Coupeur
de Fils



Pinces


Fournitures
électriques
approuvées
par les normes
locaux et
nationaux.

MISE EN GARDE:

1. FERMEZ LE COURANT AU DISJONCTEUR AVANT DE DEBUTER L'INSTALLATION DE LA FIXTURE.
N'ENLEVEZ PAS L'ISOLATION DE LA FIXTURE.
2. ATTENTION – RISQUE D'INCENDIE.
3. CE PRODUIT DOIT TRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE
QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.

N.B.: PEUT DIFFÉRER DE ILLUSTRATION.

INSTALLATION:

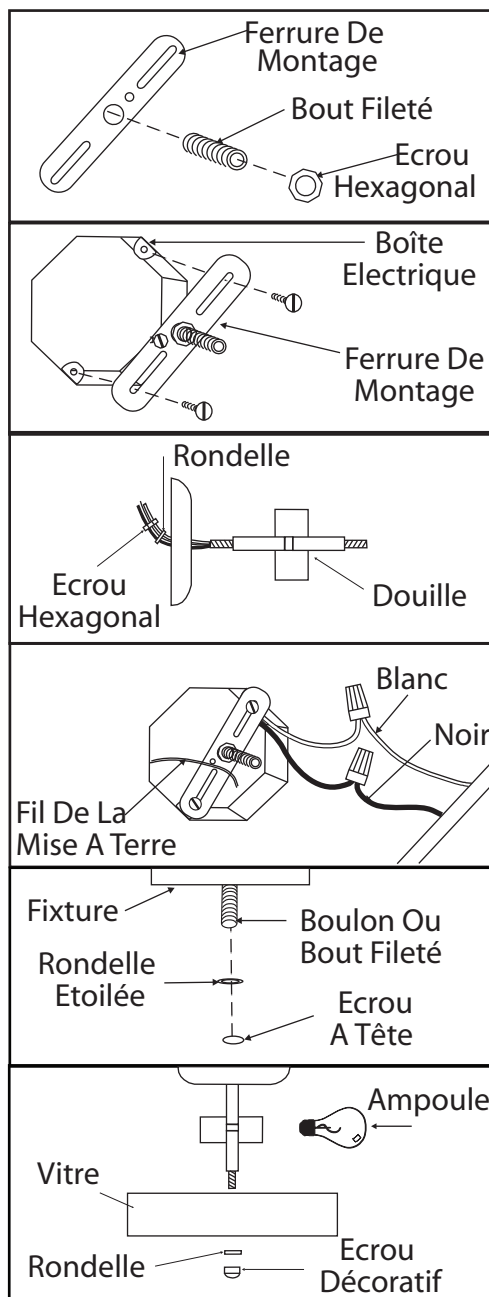

1. Posez le bout fileté à la ferrure de montage. Ajustez le jusqu'à ce qu'il dépasse le trou à l'arrière de la fixture et fixez en place à l'aide de l'écrou hexagonal.

2. Posez la ferrure de montage à la boîte électrique à l'aide des vis (en sus).

3. Posez la douille au canopé à l'aide de la rondelle et de l'écrou hexagonal.

4. Posez le fil de la mise à terre à la vis dans la boîte électrique. Posez le fil noir (ou fil marqué "SPT-1") de la fixture au fil noir dans la boîte électrique. Posez le blanc au blanc.

5. Poussez soigneusement les fils à l'intérieur de la boîte électrique, et placez la fixture sur les boulons ou le bout fileté de la ferrure de montage. Serrez en place à l'aide des rondelle(s) étoilée(s) et les écrou(s) à tête.

6. Posez l'ampoule de type et de wattage requis. (MAX 60 watt type A chacun des douilles).

7. Fixez le globe en place à l'aide du couvercle décoratif et rondelle.