

RECESSED LIGHT

(NON INSULATING)

RL-8
03/10

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) 1-800-567-2513 (French) 1-800-267-4427 (USA)
Monday through Friday 8:00 AM to 5:00 PM E.S.T.

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver




Wire Cutters



Pliers



Wrench



Wiring supplies
as required by
electrical code



Saw







SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CAUTION – RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
4. DO NOT INSTALL INSULATION WITHIN 76 mm (3 in) OF ANY PART OF THE LUMINAIRE. (FIG.8)
5. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
6. CAUTION : RISK OF FIRE, ONLY USE CANARM 5" TRIM.

NOTE: Product May Not Look Exactly As Shown In Figures.

INSTALLATION : Follow one of the following steps for your trim.

INSTALLATION:

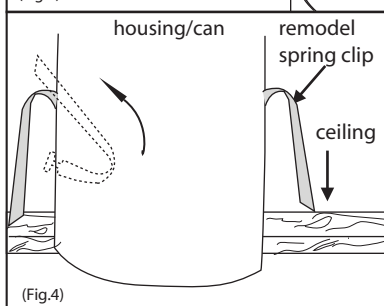
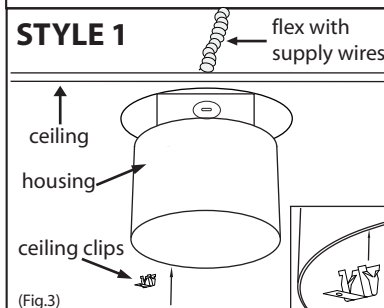
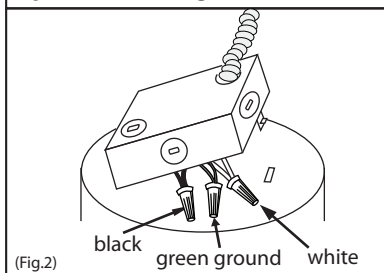
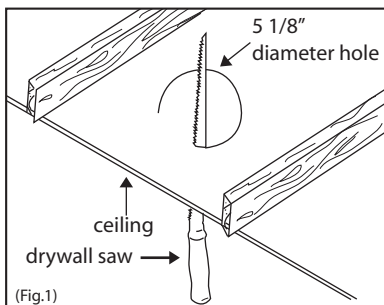


1. Using 5 1/8" template on the box, mark the openings and cut the openings with a drywall saw where you intend to install the lights. (Fig.1)

2. Pull wiring through hole cut out. Using the wire-nut, connect the incoming and outgoing wires by matching white to white, black to black and green to ground or green wire and twist on. Make sure no bare wires are exposed outside the wire connectors. (Fig.2)

3. **STYLE 1-Remodel Installation:** Install 3 or 4 ceiling clips to the housing. Lift the housing onto the drywall. (Fig.3)

Push to lock the four remodel clips to hold the can against the ceiling. (Fig.4)

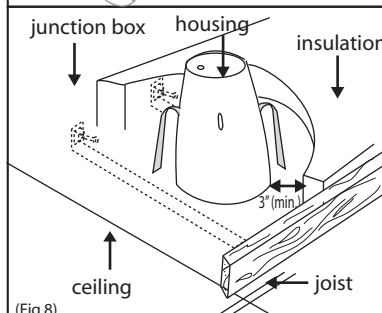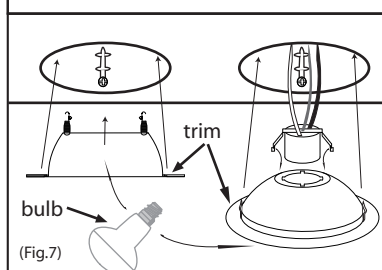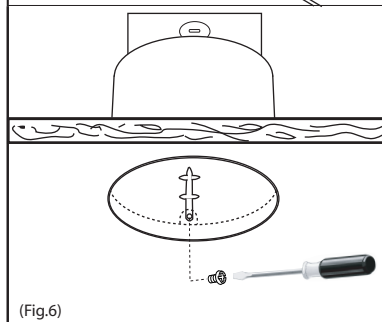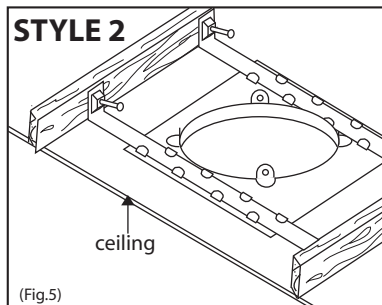

4. STYLE 2-New

Construction: Spread the mounting bars(sold separately). Align the housing to the lower edge of the joists and hammer in place. (Fig.5)

Tighten the housing to the mounting plate by screws. (Fig.6)

5. Install the bulb and trim.(Fig.7)

6. Do not install insulation within 76 mm (3 in) of any part of the luminaire. (Fig.8)