

RECESSED LIGHT

(FOR NON INSULATING CEILING)

RL-15
03/09

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) 1-800-567-2513 (French) 1-800-267-4427 (USA)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver



Wire Cutters




Pliers



Wrench



Wiring supplies
as required by
electrical code



Saw




SAFETY PRECAUTIONS:


1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CAUTION – RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
4. DO NOT INSTALL INSULATION WITHIN 76 mm (3 in) OF ANY PART OF THE LUMINAIRE. (FIG.8)
5. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
6. NOT FOR USE IN LUMINAIRES CONTROLLED BY A DIMMER.

NOTE: Product May Not Look Exactly As Shown In Figures.


INSTALLATION: Follow one of the following steps for your trim.

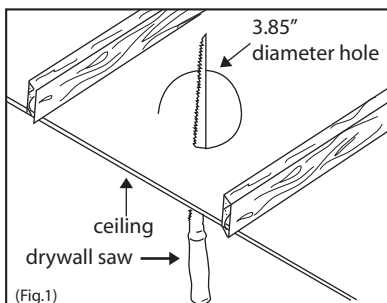


1. Using 3 85" template on the box, mark the openings and cut the openings with a drywall saw where you intend to install the lights. (Fig.1)

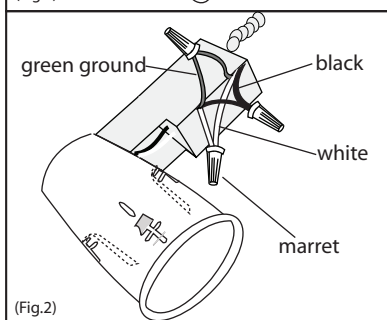






2. Pull wiring through hole cut out. Using the wire-nut, connect the incoming and outgoing wires by matching white to white, black to black and green to ground or green wire and twist on. Make sure no bare wires are exposed outside the wire connectors. (Fig.2)



3. Lift the housing onto the drywall. (Fig.3)

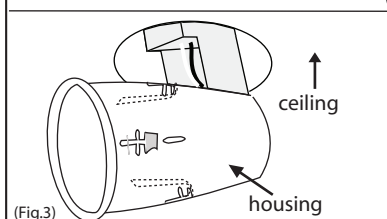

4. **STYLE 1-Remodel Installation:** Push to lock the three remodel clips to hold the can against the ceiling. (Fig.4)

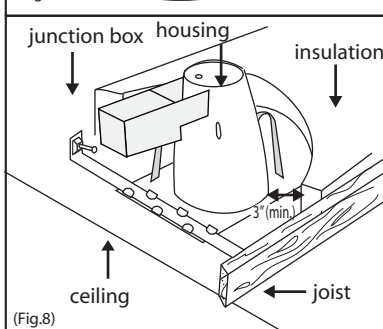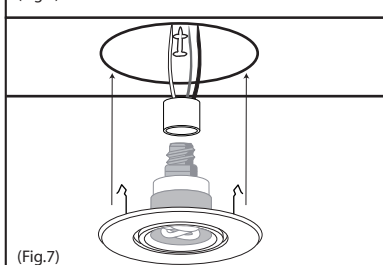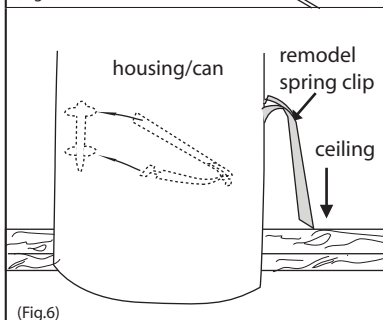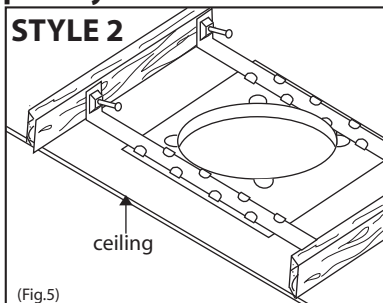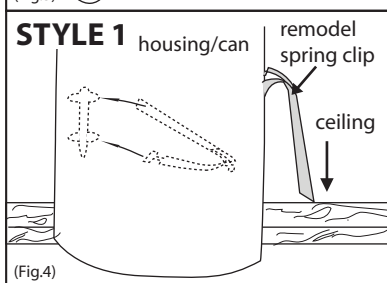

STYLE 2-New

Construction: Spread the mounting bars. Align the housing to the lower edge of the joists and hammer in place. (Fig.5)

Push to lock the three remodel clips to hold the can against the ceiling. (Fig.6)

5. Install the bulb and trim. (Fig.7)

WARNING:

THE ENCLOSED 11 WATTS COMPACT FLUORESCENT LAMP IS NOT FOR USE WHERE EXPOSED TO THE WEATHER.

THE ENCLOSED 11 WATTS COMPACT FLUORESCENT LAMP IS NOT FOR USE IN TOTALLY ENCLOSED RECESSED LUMINAIRES.

THIS 11 WATTS COMPACT FLUORESCENT LAMP IS NOT INTENDED FOR USE WITH EMERGENCY EXIT FIXTURES OR EMERGENCY EXIT LIGHTS.

6. Do not install insulation within 76 mm (3 in) of any part of the luminaire. (Fig.8)