

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Estimated Assembly Time: 10-20 minutes
Estimated Assembly Tolerances: +/-0.5mm

Assembly Instructions:

1. Identify and inspect all parts before beginning installation. Check packaging contents list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the system. Contact customer service for replacement.

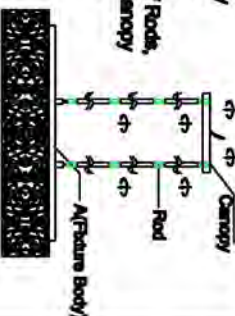
Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the bulbs. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect bulb from power source before replacing bulb. Make sure bulb is given sufficient time to cool before reuse.

B Inside Ford
B1 4740mm
B2 5700mm
B3 12740mm

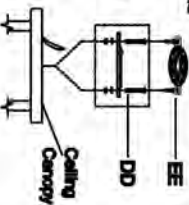
A Picture Body x1

PART	DESCRIPTION	QUANTITY
AA	Decorative Cap	2pos
BB	Electrical Nuts	3pos
CC	Outlet Box Screw	2pos
DD	Mounting Screw	2pos
EE	Mounting bracket	1pos

[illegible]

Alline up a set of holes on the Mounting bracket (EE) and Holes on the ceiling canopy. Thread Mounting Screws (DD) into the holes on the Mounting bracket (EE). Pass Lock Washers and thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.

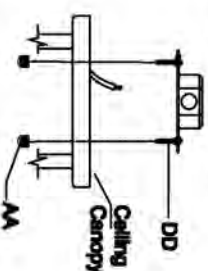
The diagram illustrates the assembly of the mounting bracket (EE) to the ceiling canopy (DD). It shows a rectangular mounting bracket (EE) with four holes. Four screws (DD) are shown being inserted into these holes. The screws are also labeled 'DD' at the bottom. The screws are shown passing through the bracket and into the ceiling canopy (DD). The ceiling canopy is shown as a rectangular plate with four holes. The screws are shown being tightened into the canopy. The diagram is labeled 'EE' for the mounting bracket and 'DD' for the ceiling canopy. The screws are labeled 'DD' at the bottom. The ceiling canopy is labeled 'Ceiling Canopy' at the bottom.

**Figure 1**

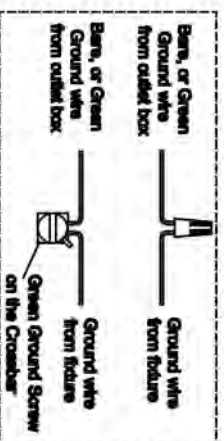
STEP 3 - Attach Mounting bracket to Outlet Box
APass the supply wires through the Mounting

**Figure 2**

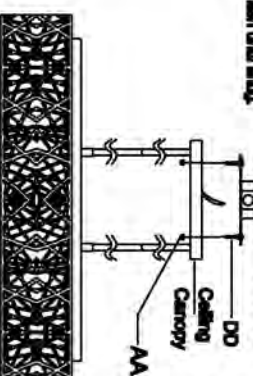
4. Fit the casting canopy to mounting screws (CD) and secure with Decorative Caps (CA). Note: The casting canopy should be snug against the ceiling and the Decorative Caps (CA). If not, adjust the length of the Mounting Screws (CD) by unscrewing the Hex Nut and Lock Washer, and then screwing Mounting Screws (CD) in or out of the Mounting Bracket (BE) until the correct length is achieved. Once the casting canopy is secure, remove the Decorative Caps (CA) and casting canopy and proceed to Step 5.

**Figure 3**

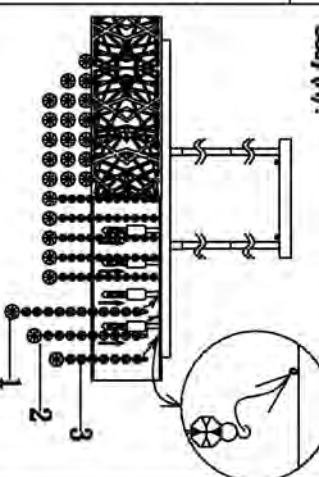
A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

**Figure 4**

A. Carefully tuck all wires into the outlet box and position the calling canopy of the Fodders Body (A) over the outlet box. Align the holes in the calling canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.

**Figure 5**

A. Install bulbs (Not include) onto sockets and push snug into place.
B. Please put the crystal (1) (2) (3) to the Fixture Body (A).

**Figure 6**