

Assembly Instruction Sheet #S- 1212P22 For Style 1212P22

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (S) SUGGESTED LED G9 BALLBULB2.5W (Not Include).

Estimated Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.
These instructions are provided for your safety. It is very important you read them completely before installing the fixture.
We strongly recommend that a licensed, professional electrician perform the installation.
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.


Package Contents

- A Fixture Body x1
B Middle Rod
C Glass shade x5
D Metal shade x3
E Glass shade x1


Hardware Contents

PNR	DESCRIPTION	QUANTITY
AA	Decorative Caps	4pcs
BB	Mounting Screws	2pcs
CC	Outlet Box Cover	2pcs
DD	Mounting Screws	2pcs
EE	Mounting Screws	2pcs

STEP 1 – Install Rods to Fixture Body
A. Thread the power cord to the Middle Rod, fix the Middle Rod with the Ceiling Canopy then the same to connect the other pieces of Rods, finally fix the Canopy with the Rods.

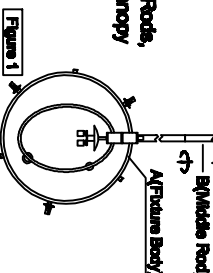


STEP 2 – Attach Mounting bracket to Outlet Box
A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (CC). Tighten until snug.

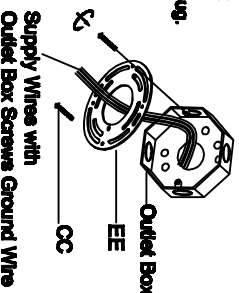

Supply Wires with Outlet Box Screws Ground Wire

STEP 3 – Fit Ceiling Canopy to Mounting bracket Assembly

A. Fit the Ceiling Canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The Ceiling Canopy should be snug against the ceiling and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Lock Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Ceiling Canopy is secure, remove the Decorative Caps (AA) and Ceiling Canopy and proceed to Step 4.

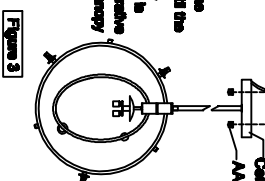

STEP 4 – Wire Connections
A. Use standard wire connections to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully self all the connected wires into the Outlet Box.

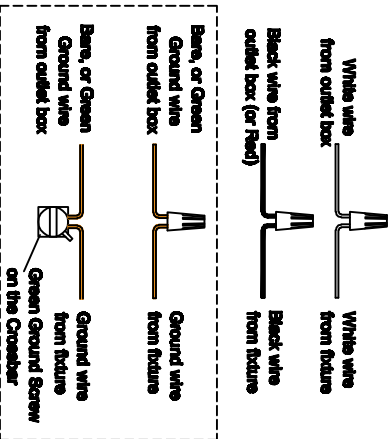


Figure 4

STEP 5 – Install Ceiling Canopy to Ceiling
A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy of the Fixture Body (A) over the outlet box. Align the holes in the Ceiling Canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.

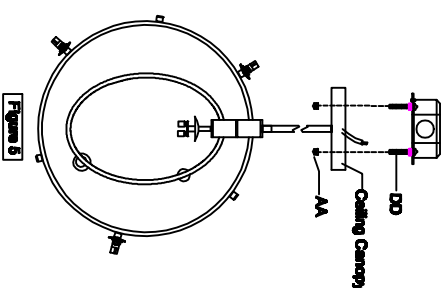


Figure 5

STEP 6 – Install bulb and Glass Shade Metal shade.
A. Install bulb (Not Include) into socket and screw snug into place.
B. Phase put the Glass Shade, Metal shade to the Fixture's Body (A)

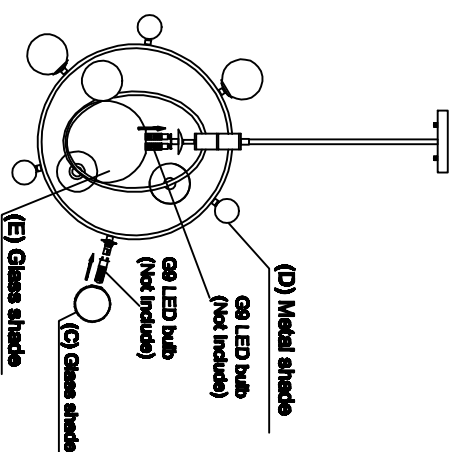


Figure 6