


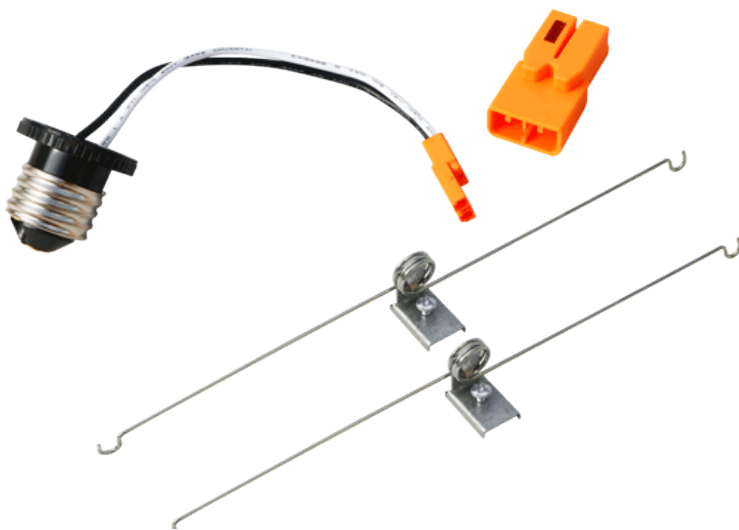

Retrofit Kit

Retrofit Kit with E26 Adapter & Spring Clips

Project:

Location:

Qty:

Notes:

Retrofit Kit with E26 Adapter and Spring Clips for model ADS7R9

COMPATIBLE FIXTURES


ADS7R9-3K-WH

ADS7R9-4K-WH


ADS7R9-5CCT-D-WH

INSTALLATION INSTRUCTIONS

1. Mount the spring clips into the holes of the indicated position for 5" or 6" housing.

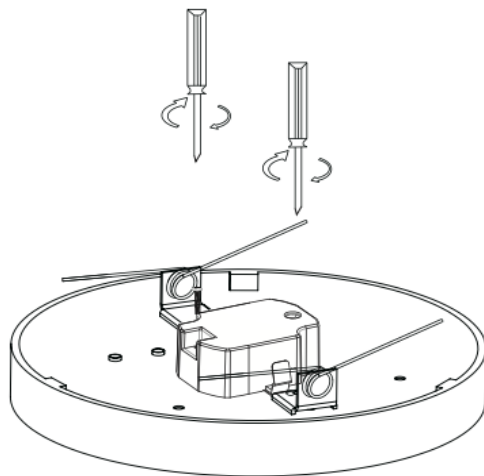


2. Insert wires into quick connector - black to black and white to white. Attach ground wire to ground screw in recessed can.

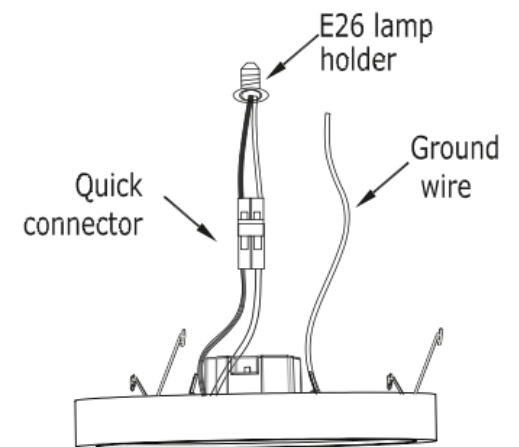

3. Connect the E26 lamp holder into socket base.

Connect quick connectors.

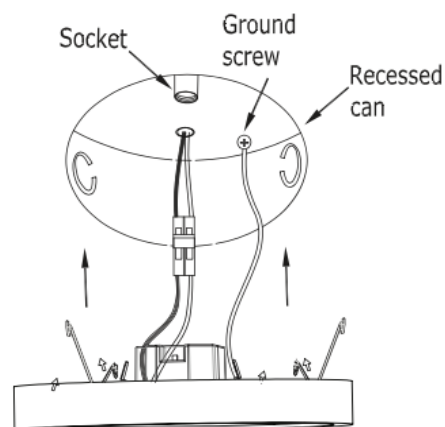

4. Tuck all wires into recessed can.

Squeeze springs and push up into recessed can.

ORDERING GUIDE

model # **RETROFIT KIT**

Lotus LED Lights USA

250 H Street # 301, Blaine WA 98230 tel 360-200-5500
Hainesport NJ, Naples FL, Vancouver WA

www.LotusLEDLights.com

mailing addresses
warehouses

Lotus LED Lights CANADA

1080 Cliveden Ave # 6, Delta BC V3M 6J6 tel 604-538-3090
Delta BC & Mississauga ON