



MD2-SERIES MINI WALL PACK

INSTALLATION INSTRUCTIONS

For use with:

Model #	Input Voltage	Wattage
MD2-204	100-277V	20W



WHAT'S IN THE BOX

- LED LUMINAIRE

WHAT YOU'LL NEED

- SAFETY GLASSES
- WIRE CUTTERS
- WIRING SUPPLIES AS SPECIFIED BY CODE

WARNING

- MIN 75°C / 167°F SUPPLY CONDUCTOR
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

IMPORTANT

Before assembling your fixture, please make sure that you carefully read through this instruction sheet. Consider having your fixture installed by a qualified licensed electrician.


Note: The important safeguards and instructions that appear in this sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

PREMISE LED Inc.
80-86 Carrier Drive
Toronto, ON Canada
M9W 5R1
PREMISELED.COM

TO INSTALL THE MINI WALL PACK


Before installing, ensure that the power source is turned off.

1

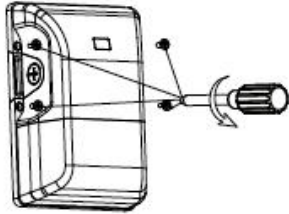


Loosen the 4 screws to remove the back plate of the wall pack.

2

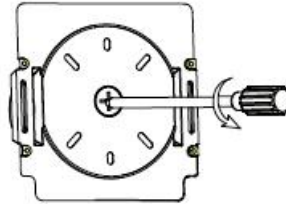


Remove the knockout on the back plate. If you are installing via side mount for a conduit connection, skip this step and proceed to step 7.

3

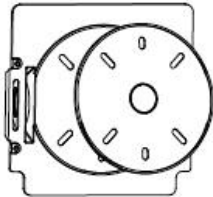


Remove the backing from the padded adhesive and affix it onto the round area of the back plate. Ensure that the screw holes are aligned.

4

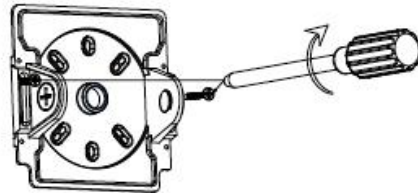

Fasten the back plate to the junction box on the wall.

5

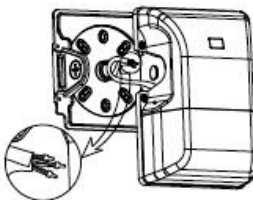

Make the appropriate wire connections.


L/live wire = Black/Brown

N/neutral wire = White/Blue

Ground wire = Green/Yellow-Green

Note: for 208V, connect second live wire to white wire.


6

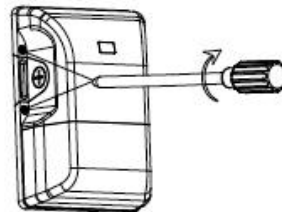

Fasten the wall pack to the back cover plate using the original 4 screws removed in Step 1. Installation is now complete.


TO INSTALL THE MINI WALL PACK

1

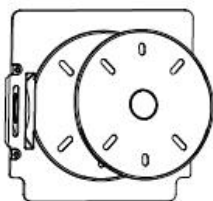


Remove the backing from the padded adhesive and paste it onto the round area of the back plate. Ensure that the screw holes are aligned.

2

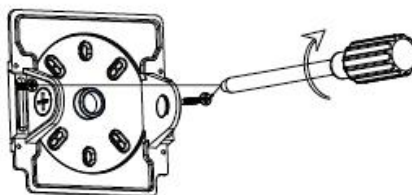


Fasten the back plate to the junction box on the wall.

3

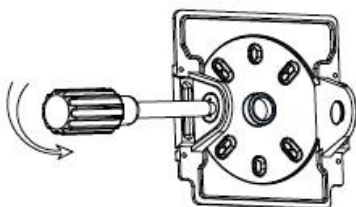

Remove the knockout on the side of the back plate.

4

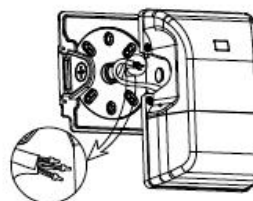


Pull the wires from the wall pack through the side knockout and make the appropriate wire connections.

L/live wire = Black/Brown

N/neutral wire = White/Blue

Ground wire – Green/Yellow-Green

5

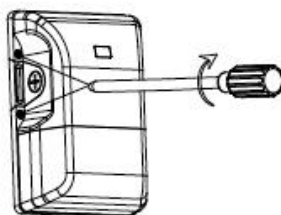

Fasten the wall pack to the back cover plate using the original 4 screws removed in Step 1. Installation is now complete.

Note: for 208V, connect second live wire to white wire.