

Assembly Instruction Sheet #IS-1065W21-3

For Style 1065W21-3

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) E12 Candelabra Base Bulbs 60W Maximum(Not Include).

Estimated Assembly Time: 15-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

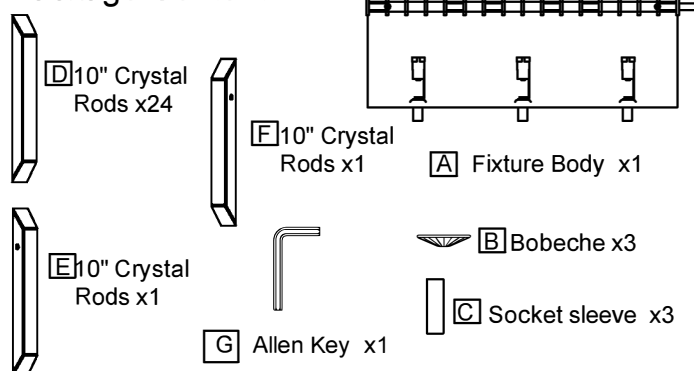

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	2pcs
BB	Electrical Marrets	2pcs
CC	Outlet Box Screw	2pcs
DD	Mounting Screw	2pcs
EE	Mounting bracket	1pcs



STEP 1 – Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

- A. Line up a set of holes on the Crossbar (EE) and Holes on the Backplate. Thread Mounting Screws (DD) into the holes on the Crossbar (EE). Pass Lock Washers and thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.

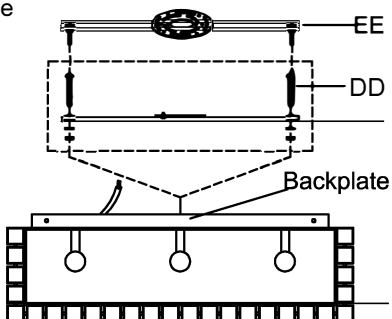



Figure 1

STEP 2 – Attach Mounting bracket to Outlet Box

- A. Pass the supply wires through the Crossbar (EE).

Attach the Crossbar (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you.

Secure it with Outlet Box Screws (not included). Tighten until snug.

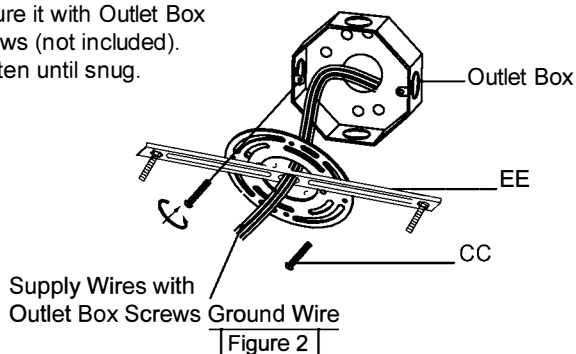

STEP 3 - Fit Backplate to Mounting bracket Assembly

- A. Fit the Backplate to Mounting Screws (DD) and secure with Cap nut (AA). Note: The Backplate should be snug against the ceiling and the Cap nut (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Backplate is secure, remove the Cap nut (AA) and Backplate and proceed to Step 4.

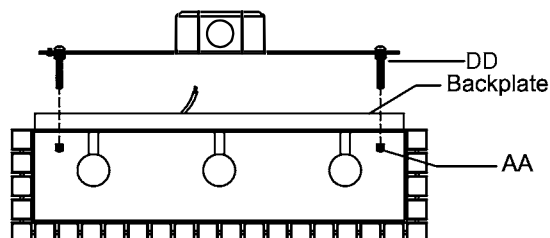


Figure 3